



Scuff Plate Trim Panel (76.49.54)

Removal

1. Remove the B-pillar lower trim panel. For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#) (Section 501-05)
2. Release the front and rear door weatherstrips to access the scuff plate trim panel.

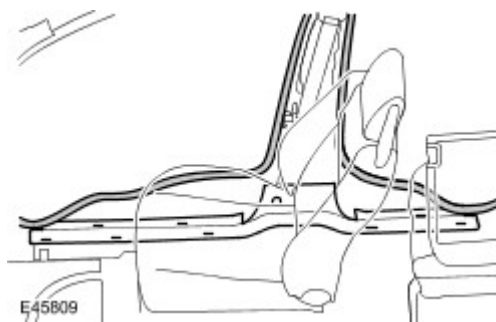

3. Remove the scuff plate trim panel.
 - ▶ Remove the 9 clips.
4. **NOTE :**
Do not disassemble further if the component is removed for access only.
Remove the 9 clips from the scuff plate trim panel.

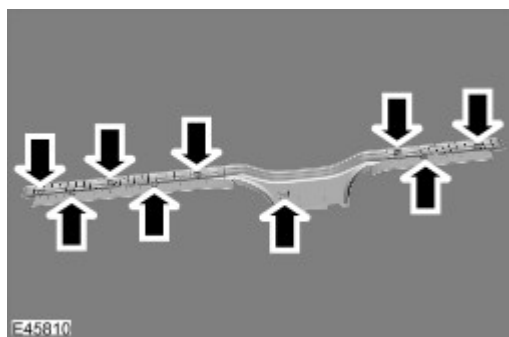

Installation

1. Install the scuff plate trim panel.
 - ▶ Install the clips.
 - ▶ Secure with the clips.
2. Attach the door weatherstrips.
3. Install the B-pillar lower trim panel. For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#) (Section 501-05)