



Cowl Side Trim Panel (76.13.27)

Removal

- 1 . Remove the front scuff plate trim panel.
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#)
- 2 . Driver side: Remove the footrest trim panel bolt.
▶ Remove the cover.

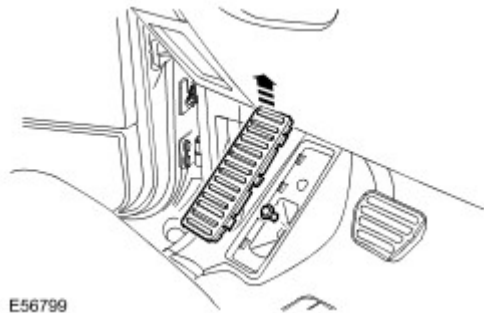

- 3 . Remove the cowl side trim panel.
▶ Driver side: Release the hood release lever.
▶ Release from the 2 clips.

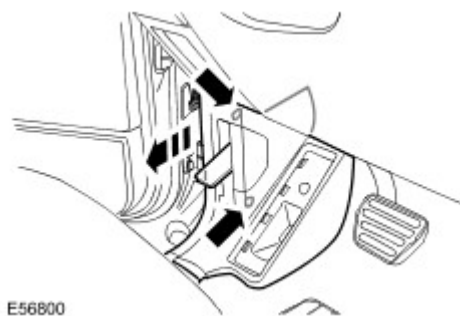

Installation

- 1 . Install the cowl side trim panel.
▶ Align the hood release lever.
▶ Secure with the clips.
- 2 . Driver side: Tighten the footrest trim panel bolt to 5 Nm (4 lb.ft).
▶ Install the cover.
- 3 . Install the front scuff plate trim panel.
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#)