


Scuff Plate Trim Panel (76.49.54)

Removal

- 1 . Remove the B-pillar lower trim panel.
For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#)
- 2 . Release the front and rear door weatherstrips to access the scuff plate trim panel.

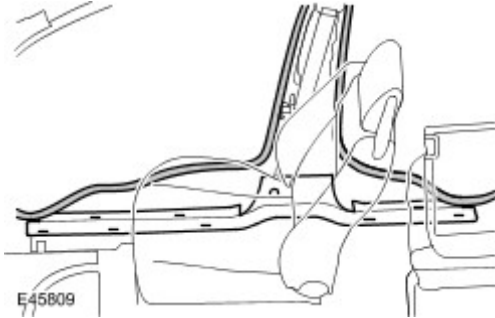


- 3 . Remove the scuff plate trim panel.
 Remove the 9 clips.



4 . NOTE:

Do not disassemble further if the component is removed for access only.

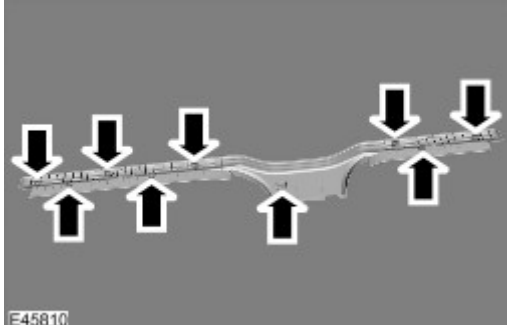Remove the 9 clips from the scuff plate trim panel.



Installation

- 1 . Install the scuff plate trim panel.
 Install the clips.
 Secure with the clips.
- 2 . Attach the door weatherstrips.
- 3 . Install the B-pillar lower trim panel.
For additional information, refer to [B-Pillar Lower Trim Panel \(76.13.29\)](#)