
Control Components - Climate Control Assembly

Removal and Installation

Removal

- Remove the instrument panel console.
 For additional information, refer to: <u>Instrument Panel Console</u> (501-12 Instrument Panel and Console, Removal and Installation).
 - 2. Remove the climate control assembly.
 - Remove the 4 Torx screws.
 - Disconnect the 4 electrical connectors.

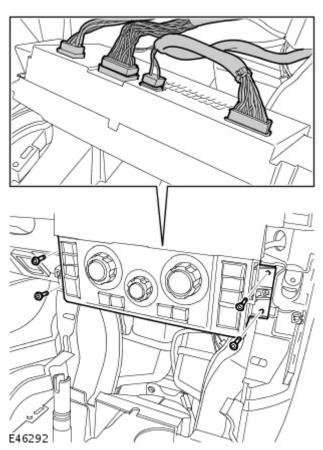

Installation

- 1. Install the climate control assembly.
 - Connect the electrical connectors.
 - Tighten the Torx screws.
- Install the instrument panel console.
 For additional information, refer to: <u>Instrument Panel Console</u> (501-12 Instrument Panel and Console, Removal and Installation).
- **3.** Using T4, configure a new climate control assembly.