TECHNICAL SERVICE BULLETIN

No.LA303-004/2006

23 January 2006

C'1-4-4-	Service Manager	Parts Manager	Warranty Administrator	Service Reception	Technicians	
Circulate to:						

C Land Rover

All rights reserved.	
Subject/Concern:	Discovery 3/LR3 - Difficult Cold Starting
Model:	
Discovery 3 / LR3	VIN Range: 5A300394-6A353440 Engine: 2.7L(TdV6) Diesel

Markets: All Section: 303-00

Summary

A customer may report a concern that in cold weather conditions, the vehicle is difficult to start. Investigation using the worldwide diagnosis system (WDS) reveal the diagnostic trouble code (DTC) P0181 - Fuel System Temperature Sensor Range.

Cause: A software calibration/sensitivity issue exists between the fuel temperature and coolant temperature readings used by the engine management software resulting in the above concern.

Action: Should a customer express concern regarding the above, refer to the Service Procedure detailed in this bulletin to update the engine management software.

Parts Required	
Description	Quantity
WDS disc 13 or later	1

Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to DDW to obtain the latest repair time.

Operation Description	Operation No.	Time
Tune Download - Engine management ECU	12.90.13	0.20 hours
Repair/Claim Coding		
Causal Part:	NNN500560	
ACES Condition Code:	07	

Service Procedure

- 1. Connect WDS to the vehicle.
- Note the current software levels of the diesel engine control module:
 - 1. Enter the vehicle details.
 - 2. Select the 'Vehicle Configuration' tab.
 - 3. Select 'Module Information'
 - 4. Select 'Network integrity test'
 - 5. Note the software part numbers displayed on the screen.
- 3. Configure the diesel engine control module:
 - 1. Return to the 'Vehicle Configuration' screen and select 'Module Configuration'
 - 2. Select 'Configure Existing Modules'.

- From the sub-menu, select 'Diesel Engine Control Module'
- 3. Check the tick-box to continue and follow the on-screen instructions.
- **4.** Repeat step to confirm the software level change.
- 5. Disconnect WDS from the vehicle