

General Information

Service Information

100-00 : General Information

Description and Operation

[How To Use This Manual](#)[Important Safety Instructions](#)[General Service Information](#)[Standard Workshop Practices](#)[Health and Safety Precautions](#)[Solvents, Sealants and Adhesives](#)[Road/Roller Testing](#)[Special Tool Glossary](#)**100-01 : Identification Codes**

Description and Operation

[Identification Codes](#)**100-02 : Jacking and Lifting**

Description and Operation

[Jacking](#)[Lifting](#)[Vehicle Recovery](#)**100-03 : Maintenance Schedules**

Description and Operation

[Maintenance Schedules - Gasoline Engines](#)[Maintenance Schedules - Diesel Engines](#)**Chassis**

Suspension

204-00 : Suspension System - General Information

Specifications

[Specifications](#)

General Procedures

[Four-Wheel Alignment](#) (57.65.04)**204-01 : Front Suspension**

Specifications

[Specifications](#)

Description and Operation

[Front Suspension](#)

Removal and Installation

[Stabilizer Bar](#) (60.10.01)[Stabilizer Bar Link](#) (60.10.02)[Upper Arm Ball Joint](#) (60.15.02)[Lower Arm Ball Joint](#) (60.15.03)[Wheel Knuckle](#) (60.25.01)[Wheel Bearing and Wheel Hub](#) (60.25.14)[Shock Absorber and Spring Assembly](#) (60.30.25/99)[Upper Arm](#) (60.35.01)[Lower Arm](#) (60.35.02)[Upper Arm Bushing](#) (60.35.32)[Lower Arm Bushing](#) (60.35.33)**204-02 : Rear Suspension**

Specifications

[Specifications](#)

Description and Operation

[Rear Suspension](#)

Removal and Installation

[Upper Arm Ball Joint](#) (64.15.07)[Lower Arm Ball Joint](#) (64.15.08)[Wheel Bearing and Wheel Hub](#) (64.15.14)[Shock Absorber and Spring Assembly](#) (64.30.11/99)[Stabilizer Bar](#) (64.35.08)[Wheel Knuckle](#) (64.35.10)[Upper Arm Bushing](#) (64.35.22)[Stabilizer Bar Link](#) (64.35.24)[Lower Arm](#) (64.35.54)[Upper Arm](#) (64.35.60)[Toe Link](#) (64.35.70)[Lower Arm Bushing](#)**204-04 : Wheels and Tires**

Specifications

- [Specifications](#)
- Description and Operation
 - [Wheels and Tires](#)
- Removal and Installation
 - [Tire Low Pressure Sensor](#) (74.10.05)
 - [Tire Pressure Monitoring System Front Antenna](#) (86.53.16)
 - [Tire Pressure Monitoring System Rear Antenna](#) (86.53.17)
- 204-05 : Vehicle Dynamic Suspension**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Air Suspension System Depressurize and Pressurize](#) (60.50.38)
 - [Ride Height Adjustments](#) (60.90.03)
 - Description and Operation
 - [Vehicle Dynamic Suspension](#)
 - Removal and Installation
 - [Suspension Height Sensor](#) (60.36.01)
 - [Air Suspension Reservoir](#) (60.50.03)
 - [Air Suspension Control Module](#) (60.50.04)
 - [Air Suspension Reservoir Solenoid Valve Block](#) (60.50.05)
 - [Air Suspension Compressor Drier](#) (60.50.09)
 - [Air Suspension Compressor](#) (60.50.10)
 - [Air Suspension Front Solenoid Valve Block](#) (60.50.11)
 - [Air Suspension Muffler](#) (64.50.01)
 - [Air Suspension Rear Solenoid Valve Block](#) (64.50.11)
 - [Air Suspension Air Filter](#) (64.50.12)
 - [Front Air Shock Absorber](#) (60.30.02.45)
 - [Rear Air Shock Absorber](#) (64.30.02.45)
 - [Front Shock Absorber and Air Spring Assembly](#) (60.21.01.99)
 - [Rear Shock Absorber and Air Spring Assembly](#) (64.21.01.99)
- 204-06 : Ride and Handling Optimization**
 - Description and Operation
 - [Ride and Handling Optimization](#)
 - Removal and Installation
 - [Ride and Handling Optimization Switch](#) (86.65.11)
 - Driveline
- 205-00 : Driveline System - General Information**
- 205-01 : Driveshaft**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Driveshaft](#)
 - [Universal Joints](#)
 - Removal and Installation
 - [Front Driveshaft - 4.4L](#) (47.15.02)
 - [Front Driveshaft - 4.0L](#) (47.15.02)
 - [Front Driveshaft - 2.7L Diesel](#) (47.15.02)
 - [Rear Driveshaft](#) (47.15.03)
- 205-02 : Rear Drive Axle/Differential**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Differential Draining and Filling](#) (51.25.02)
 - Description and Operation
 - [Rear Drive Axle and Differential](#)
 - Removal and Installation
 - [Axle Assembly](#) (51.15.01)
 - [Axle Housing Bushing](#) (51.15.41)
 - [Rear Axle Housing Support Insulator](#) (51.15.44)
 - In Vehicle Repair
 - [Differential Locking Motor](#) (51.15.03)
 - [Rear Axle Oil Temperature Sensor](#) (51.15.06)
 - [Drive Pinion Seal](#) (51.20.01)
 - [Differential Locking Module](#) (51.30.01)
- 205-03 : Front Drive Axle/Differential**
 - Specifications
 - [Specifications](#)
 - General Procedures

- [Differential Draining and Filling](#) (54.15.02)
 - Description and Operation
 - [Front Drive Axle and Differential](#)
 - Removal and Installation
 - [Axle Assembly](#) (54.10.01)
 - [Axle Carrier Bushing](#) (54.10.26)
 - In Vehicle Repair
 - [Drive Pinion Seal](#) (54.10.20)
 - [Front Axle Housing Support Insulator](#) (54.10.24)
 - [Axle Tube](#) (47.10.42)
- 205-04 : Front Drive Halfshafts**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Front Drive Halfshafts](#)
 - [Halfshaft Joint](#)
 - Removal and Installation
 - [Halfshaft LH](#) (47.10.01)
 - [Halfshaft RH](#) (47.10.02)
 - [Outer Constant Velocity \(CV\) Joint Boot](#) (47.10.03)
 - [Inner Constant Velocity \(CV\) Joint Boot](#) (47.10.16)
- 205-05 : Rear Drive Halfshafts**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Rear Drive Halfshafts](#)
 - Removal and Installation
 - [Halfshaft](#) (47.11.01)
 - [Outer Constant Velocity \(CV\) Joint Boot](#) (47.11.03)
 - [Inner Constant Velocity \(CV\) Joint Boot](#) (47.11.16)
 - [Halfshaft Bearing](#) (51.10.29)
- Brake System
- 206-00 : Brake System - General Information**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Brake System Bleeding](#) (70.25.02)
 - [Brake System Pressure Bleeding](#) (70.25.02)
 - [Front Brake Disc Runout Check](#) (70.12.15.01)
 - [Rear Brake Disc Runout Check](#) (70.12.36.01)
- 206-03 : Front Disc Brake**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Front Disc Brake](#)
 - Removal and Installation
 - [Brake Disc](#) (70.12.10)
 - [Brake Pads](#) (70.40.02)
 - [Brake Caliper](#) (70.55.24)
- 206-04 : Rear Disc Brake**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Rear Disc Brake](#)
 - Removal and Installation
 - [Brake Disc](#) (70.12.33)
 - [Brake Pads](#) (70.40.03)
 - [Brake Caliper](#) (70.55.25)
 - [Brake Caliper Anchor Plate](#) (70.55.29)
- 206-05 : Parking Brake and Actuation**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Parking Brake Shoe and Lining Adjustment](#) (70.40.11)
 - [Parking Brake Shoes Bedding-In](#) (70.40.12)
 - Description and Operation
 - [Parking Brake](#)
 - Removal and Installation

- [Parking Brake Cable](#) (70.35.25)
- [Parking Brake Switch](#) (70.35.46)
- [Parking Brake Actuator - 2.7L Diesel](#) (70.35.48)
- [Parking Brake Actuator - 4.0L/4.4L](#) (70.35.48)
- [Shoes](#)
- 206-06 : Hydraulic Brake Actuation**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Hydraulic Brake Actuation](#)
 - Removal and Installation
 - [Brake Fluid Reservoir](#) (70.25.31)
 - [Brake Master Cylinder](#) (70.30.08)
 - [Brake Pedal - Vehicles With: Automatic Transmission](#) (70.35.01)
 - [Brake Pedal and Bracket - Vehicles With: Manual Transmission](#) (70.35.03)
 - [Brake Pedal and Bracket - Vehicles With: Automatic Transmission](#) (70.35.03)
- 206-07 : Power Brake Actuation**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Brake Booster](#)
 - Removal and Installation
 - [Brake Booster](#) (70.50.01)
 - [Brake Vacuum Pump - 2.7L Diesel](#) (70.50.19)
 - [Brake Vacuum Pump - 4.0L/4.4L](#) (70.50.19)
- 206-09A : Anti-Lock Control - Traction Control**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Anti-Lock Control - Traction Control](#)
 - Removal and Installation
 - [Anti-Lock Brake System \(ABS\) Module](#) (70.25.12)
 - [Front Wheel Speed Sensor](#) (70.65.30)
 - [Rear Wheel Speed Sensor](#) (70.65.31)
- 206-09B : Anti-Lock Control - Stability Assist**
 - Removal and Installation
 - [Yaw Rate Sensor](#) (70.70.35)
 - Steering System
- 211-00 : Steering System - General Information**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Power Steering System Filling and Bleeding](#)
 - Description and Operation
 - [Steering System](#)
- 211-02 : Power Steering**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Power Steering Pressure Test - 4.0L](#)
 - [Power Steering Pressure Test - 4.4L](#)
 - [Power Steering Pressure Test - 2.7L Diesel](#)
 - Description and Operation
 - [Power Steering](#)
 - Removal and Installation
 - [Steering Gear - 4.0L](#) (57.10.01)
 - [Steering Gear - 4.4L](#) (57.10.01)
 - [Steering Gear - 2.7L Diesel](#) (57.10.01)
 - [Power Steering Fluid Reservoir - 4.0L/4.4L](#) (57.15.08)
 - [Power Steering Fluid Reservoir - 2.7L Diesel](#) (57.15.08)
 - [Power Steering Fluid Cooler - 4.0L/4.4L](#) (57.15.11)
 - [Power Steering Fluid Cooler - 2.7L Diesel](#) (57.15.11)
 - [Power Steering Pump - 4.0L](#) (57.20.14)
 - [Power Steering Pump - 4.4L](#) (57.20.14)
 - [Power Steering Pump - 2.7L Diesel](#) (57.20.14)
 - [Steering Angle Sensor](#) (57.40.02)
- 211-03 : Steering Linkage**
 - Specifications

[Specifications](#)

Description and Operation

[Steering Linkage](#)

Removal and Installation

[Tie-Rod End](#) (57.55.07)[Steering Gear Boot](#) (57.10.29)**211-04 : Steering Column**

Specifications

[Specifications](#)

Description and Operation

[Steering Column](#)

Removal and Installation

[Steering Column](#) (57.40.06)[Steering Column Shaft](#) (57.40.22)[Steering Wheel](#) (57.61.01)**211-05 : Steering Column Switches**

Specifications

[Specifications](#)

Description and Operation

[Steering Column Switches](#)

Removal and Installation

[Steering Column Lock and Ignition Switch Housing](#) (57.40.31)[Ignition Switch](#) (86.65.02)[Steering Column Multifunction Switch RH](#) (86.65.41)[Steering Column Multifunction Switch LH](#) (86.65.55)**Powertrain**

Engine

303-00 : Engine System - General Information

General Procedures

[Bearing Inspection](#)[Camshaft Bearing Journal Clearance](#)[Camshaft Bearing Journal Diameter](#)[Camshaft End Play](#)[Camshaft Lobe Lift](#)[Camshaft Surface Inspection](#)[Connecting Rod Cleaning](#)[Connecting Rod Large End Bore](#)[Crankshaft End Play](#)[Crankshaft Main Bearing Journal Clearance](#)[Cylinder Bore Out-of-Round](#)[Cylinder Head Distortion](#)[Exhaust Manifold Cleaning and Inspection](#)[Piston Inspection](#)[Piston Pin Diameter](#)[Piston Pin to Bore Diameter](#)[Piston Ring End Gap](#)[Piston Ring-to-Groove Clearance](#)[Valve Spring Free Length](#)[Valve Stem Diameter](#)

Diagnosis and Testing

[Engine - 4.0L](#)[Engine - 4.4L](#)[Engine - 2.7L Diesel](#)**303-01A : Engine - 4.0L**

Specifications

[Specifications](#)

General Procedures

[Engine Oil Draining and Filling](#) (12.60.05)[Camshaft Timing](#)

Description and Operation

[Engine](#)

Removal

[Engine](#) (12.41.01.99)

Installation

[Engine](#) (12.41.01.99)

In Vehicle Repair

[Camshaft RH](#) (12.13.03)[Crankshaft Pulley](#) (12.21.01)

- [Crankshaft Front Seal](#) (12.21.14)
- [Crankshaft Rear Seal](#) (12.21.20)
- [Cylinder Block Cradle](#) (12.25.06)
- [Cylinder Head LH](#) (12.29.04)
- [Cylinder Head RH](#) (12.29.05)
- [Valve Cover LH](#) (12.29.43)
- [Valve Cover RH](#) (12.29.44)
- [Camshaft Roller Follower](#) (12.29.57)
- [Engine Mount LH](#) (12.45.11)
- [Engine Mount RH](#) (12.45.12)
- [Flexplate](#) (12.53.13)
- [Oil Pump](#) (12.60.26)
- [Oil Pan](#) (12.60.44)
- [Oil Cooler](#) (12.60.68)
- [Engine Front Cover](#) (12.65.01)
- [Timing Drive Components](#) (12.65.13)
- [Camshaft Drive Cassette LH](#) (12.65.36)
- [Camshaft Drive Cassette RH](#) (12.65.37)
- [Engine Dynamic Balance Shaft](#) (12.65.38)
- [Jackshaft](#) (12.65.38)
- [Hydraulic Timing Chain Tensioner LH](#) (12.65.65)
- [Hydraulic Timing Chain Tensioner RH](#) (12.65.66)
- [Intake Manifold](#) (30.15.02)
- [Exhaust Manifold LH](#) (30.15.10)
- [Exhaust Manifold RH](#) (30.15.11)

303-01B : Engine - 4.4L

Specifications

[Specifications](#)

General Procedures

[Valve Clearance Check](#) (12.29.72)

[Valve Clearance Adjustment](#) (12.29.76)

[Engine Oil Draining and Filling](#) (12.60.05)

Description and Operation

[Engine](#)

Removal

[Engine](#) (12.41.01.99)

Installation

[Engine](#) (12.41.01.99)

In Vehicle Repair

[Camshafts RH](#) (12.13.20)

[Camshafts LH](#) (12.13.21)

[Crankshaft Pulley](#) (12.21.01)

[Crankshaft Front Seal](#) (12.21.14)

[Crankshaft Rear Seal](#) (12.21.20)

[Timing Drive Components](#) (12.65.13)

[Cylinder Head LH](#) (12.29.04)

[Valve Cover LH](#) (12.29.43)

[Valve Cover RH](#) (12.29.44)

[Engine Mount LH](#) (12.45.11)

[Engine Mount RH](#) (12.45.12)

[Flexplate](#) (12.53.13)

[Oil Pump](#) (12.60.26)

[Oil Pan](#) (12.60.44)

[Oil Cooler](#) (12.60.68)

[Engine Front Cover](#) (12.65.01)

[Exhaust Manifold LH](#) (30.15.10)

[Exhaust Manifold RH](#) (30.15.11)

303-01C : Engine - 2.7L Diesel

Specifications

[Specifications](#)

General Procedures

[Engine Oil Draining and Filling](#) (12.60.05)

Description and Operation

[Engine](#)

Removal

[Engine - Vehicles With: Automatic Transmission](#) (12.41.01.99)

[Engine - Vehicles With: Manual Transmission](#) (12.41.01.99)

Installation

- [Engine - Vehicles With: Automatic Transmission](#) (12.41.01.99)
- [Engine - Vehicles With: Manual Transmission](#) (12.41.01.99)
- In Vehicle Repair
 - [Camshaft LH](#) (12.13.02)
 - [Camshaft RH](#) (12.13.03)
 - [Camshaft Front Seal](#) (12.13.44)
 - [Camshaft Rear Seal](#) (12.13.06)
 - [Crankshaft Front Seal](#) (12.21.14)
 - [Crankshaft Rear Seal with Retainer Plate](#) (12.21.20)
 - [Cylinder Head LH](#) (12.29.04)
 - [Cylinder Head RH](#) (12.29.05)
 - [Valve Cover LH](#) (12.29.43)
 - [Valve Cover RH](#) (12.29.44)
 - [Engine Mount LH](#) (12.45.11)
 - [Engine Mount RH](#) (12.45.12)
 - [Flywheel](#) (12.53.07)
 - [Flexplate](#) (12.53.13)
 - [Oil Pump](#) (12.60.26)
 - [Oil Pressure Switch](#) (12.60.50)
 - [Oil Cooler](#) (12.60.68)
 - [Oil Pump Screen and Pickup Tube](#) (12.60.20)
 - [Oil Pan](#) (12.60.44)
 - [Timing Belt Cover](#) (12.65.03)
 - [Timing Belt](#) (12.65.18)
 - [Exhaust Manifold LH](#) (30.15.10)
 - [Exhaust Manifold RH](#) (30.15.11)
 - [Oil Filter Housing](#)
- 303-03A : Engine Cooling - 4.0L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Cooling System Draining, Filling and Bleeding](#) (26.10.01)
 - Description and Operation
 - [Engine Cooling](#)
 - Removal and Installation
 - [Coolant Expansion Tank](#) (26.15.01)
 - [Cooling Fan](#) (26.25.19)
 - [Cooling Fan Shroud](#) (26.25.11)
 - [Radiator](#) (26.40.01)
 - [Thermostat](#) (26.45.01)
 - [Coolant Pump](#) (26.50.01)
- 303-03B : Engine Cooling - 4.4L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Cooling System Draining, Filling and Bleeding](#) (26.10.01)
 - Description and Operation
 - [Engine Cooling](#)
 - Removal and Installation
 - [Coolant Expansion Tank](#) (26.15.01)
 - [Cooling Fan](#) (26.25.19)
 - [Cooling Fan Shroud](#) (26.25.11)
 - [Radiator](#) (26.40.01)
 - [Thermostat](#) (26.45.01)
 - [Coolant Pump](#) (26.50.01)
- 303-03C : Engine Cooling - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Cooling System Draining, Filling and Bleeding](#) (26.10.01)
 - Description and Operation
 - [Engine Cooling](#)
 - Removal and Installation
 - [Coolant Expansion Tank](#) (26.15.01)
 - [Cooling Fan](#) (26.25.19)
 - [Cooling Fan Shroud](#) (26.25.11)
 - [Radiator](#) (26.40.01)
 - [Thermostat](#) (26.45.01)

- [Coolant Pump](#) (26.50.01)
- 303-04A : Fuel Charging and Controls - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Fuel Charging and Controls](#)
 - Removal and Installation
 - [Fuel Rail](#) (19.60.04)
 - [Throttle Body Gasket](#)
 - [Fuel Injector](#) (19.60.10)
- 303-04B : Fuel Charging and Controls - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Fuel Charging and Controls](#)
 - Removal and Installation
 - [Fuel Rail](#) (19.60.04)
 - [Fuel Injectors](#) (19.60.12)
 - [Intake Manifold Assembly](#) (30.15.02)
 - [Throttle Body Gasket](#)
- 303-04C : Fuel Charging and Controls - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Fuel Charging and Controls](#)
 - Removal and Installation
 - [Fuel Pump](#) (19.45.08)
 - [Fuel Injectors](#) (19.60.12)
 - [Intake Air Shutoff Throttle](#) (19.70.32)
- 303-04D : Fuel Charging and Controls - Turbocharger - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Turbocharger](#)
 - Removal and Installation
 - [Turbocharger](#) (19.42.01)
 - [Turbocharger Intake Tube](#) (19.42.11)
- 303-05A : Accessory Drive - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Accessory Drive](#)
 - Removal and Installation
 - [Accessory Drive Belt](#) (86.10.03)
 - [Accessory Drive Belt Tensioner](#) (86.10.06)
 - [Accessory Drive Belt Idler Pulley](#) (86.10.23)
- 303-05B : Accessory Drive - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Accessory Drive](#)
 - Removal and Installation
 - [Cooling Fan Belt](#) (26.25.01)
 - [Cooling Fan Belt Tensioner](#) (26.25.02)
 - [Accessory Drive Belt](#) (86.10.03)
 - [Accessory Drive Belt Tensioner](#) (86.10.06)
 - [Accessory Drive Belt Idler Pulley](#) (86.10.23)
- 303-05C : Accessory Drive - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Accessory Drive](#)
 - Removal and Installation
 - [Fuel Injection Pump Belt](#) (12.10.27)
 - [Accessory Drive Belt](#) (86.10.03)
 - [Accessory Drive Belt Tensioner](#) (86.10.06)
 - [Accessory Drive Belt Idler Pulley](#) (86.10.23)
 - [Fuel Injection Pump Pulley](#)

- 303-06A : Starting System - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Starting System](#)
 - Removal and Installation
 - [Starter Motor](#) (86.60.01)
- 303-06B : Starting System - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Starting System](#)
 - Removal and Installation
 - [Starter Motor](#) (86.60.01)
- 303-06C : Starting System - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Starting System](#)
 - Removal and Installation
 - [Starter Motor](#) (86.60.01)
- 303-07A : Engine Ignition - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Engine Ignition](#)
 - Removal and Installation
 - [Spark Plugs](#) (18.20.02)
 - [Ignition Coil](#) (18.20.32)
- 303-07B : Engine Ignition - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Engine Ignition](#)
 - Removal and Installation
 - [Spark Plugs](#) (18.20.02)
 - [Ignition Coil-On-Plug](#) (18.20.44)
- 303-07C : Glow Plug System**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Glow Plug System](#)
 - Removal and Installation
 - [Glow Plugs](#) (19.60.31)
 - [Glow Plug Module](#) (19.60.33)
 - [Glow Plug Relay](#) (19.60.34)
- 303-08A : Engine Emission Control - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Engine Emission Control](#)
 - Removal and Installation
 - [Positive Crankcase Ventilation \(PCV\) Valve](#) (17.10.14)
 - [Exhaust Gas Recirculation \(EGR\) Modulator Valve](#) (17.45.04)
- 303-08B : Engine Emission Control - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Engine Emission Control](#)
 - Removal and Installation
 - [Positive Crankcase Ventilation \(PCV\) Valve](#) (17.10.14)
 - [Exhaust Gas Recirculation \(EGR\) Valve](#) (17.45.01)
- 303-08C : Engine Emission Control - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Engine Emission Control](#)
 - Removal and Installation

- [Crankcase Vent Oil Separator](#) (17.10.04)
- [Exhaust Gas Recirculation \(EGR\) Valve LH](#) (17.45.16)
- [Exhaust Gas Recirculation \(EGR\) Valve RH](#) (17.45.17)
- [Exhaust Gas Recirculation \(EGR\) Valve Outlet Tube](#) (17.45.18)
- 303-12A : Intake Air Distribution and Filtering - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Intake Air Distribution and Filtering](#)
 - Removal and Installation
 - [Air Cleaner](#) (19.10.01)
 - [Air Cleaner Element](#) (19.10.10)
 - [Intake Air Resonator](#) (19.70.03)
- 303-12B : Intake Air Distribution and Filtering - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Intake Air Distribution and Filtering](#)
 - Removal and Installation
 - [Air Cleaner](#) (19.10.01)
 - [Air Cleaner Element](#) (19.10.10)
 - [Intake Air Resonator](#) (19.70.03)
- 303-12C : Intake Air Distribution and Filtering - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Intake Air Distribution and Filtering](#)
 - Removal and Installation
 - [Air Cleaner](#) (19.10.01)
 - [Air Cleaner Element](#) (19.10.10)
 - [Charge Air Cooler](#) (19.46.19)
- 303-13A : Evaporative Emissions - 4.0L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Evaporative Emission System Leak Test](#) (17.90.02.01)
 - Description and Operation
 - [Evaporative Emissions](#)
 - Removal and Installation
 - [Evaporative Emission Canister](#) (17.15.13)
 - [Evaporative Emission Canister Purge Valve](#) (17.15.39)
- 303-13B : Evaporative Emissions - 4.4L**
 - General Procedures
 - [Evaporative Emission System Leak Test](#) (17.90.02.01)
 - Description and Operation
 - [Evaporative Emissions](#)
 - Removal and Installation
 - [Evaporative Emission Canister Purge Valve](#) (17.15.39)
- 303-13C : Evaporative Emissions - 2.7L Diesel**
 - Description and Operation
- 303-14A : Electronic Engine Controls - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Electronic Engine Controls](#)
 - Removal and Installation
 - [Engine Oil Pressure \(EOP\) Sensor](#) (12.60.50)
 - [Oil Temperature Sensor](#) (12.60.65)
 - [Engine Control Module \(ECM\)](#) (18.30.03)
 - [Engine Coolant Temperature \(ECT\) Sensor](#) (18.30.10)
 - [Crankshaft Position \(CKP\) Sensor](#) (18.30.12)
 - [Throttle Position \(TP\) Sensor](#) (18.30.17)
 - [Camshaft Position \(CMP\) Sensor](#) (18.30.24)
 - [Knock Sensor \(KS\) LH](#) (18.30.28)
 - [Knock Sensor \(KS\) RH](#) (18.30.30)
 - [Heated Oxygen Sensor \(HO2S\) LH](#) (19.22.16)
 - [Mass Air Flow \(MAF\) Sensor](#) (19.22.25)
 - [Intake Manifold Tuning \(IMT\) Valve](#) (19.22.65)

- [Catalyst Monitor Sensor LH](#) (19.22.71)
- [Engine Control Module \(ECM\) Cooling Fan](#) (18.30.80)
- 303-14B : Electronic Engine Controls - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Electronic Engine Controls](#)
 - Removal and Installation
 - [Variable Camshaft Timing \(VCT\) Oil Control Solenoid](#) (12.30.60)
 - [Engine Oil Pressure \(EOP\) Sensor](#) (12.60.50)
 - [Oil Temperature Sensor](#) (12.60.65)
 - [Engine Control Module \(ECM\)](#) (18.30.03)
 - [Engine Coolant Temperature \(ECT\) Sensor](#) (18.30.10)
 - [Crankshaft Position \(CKP\) Sensor](#) (18.30.12)
 - [Throttle Position \(TP\) Sensor](#) (18.30.17)
 - [Camshaft Position \(CMP\) Sensor](#) (18.30.24)
 - [Knock Sensor \(KS\)](#) (18.30.30)
 - [Manifold Absolute Pressure \(MAP\) Sensor](#) (18.30.56)
 - [Fuel Temperature Sensor](#) (19.22.08)
 - [Heated Oxygen Sensor \(HO2S\) LH](#) (19.22.16)
 - [Mass Air Flow \(MAF\) Sensor](#) (19.22.25)
 - [Catalyst Monitor Sensor LH](#) (19.22.71)
 - [Engine Control Module \(ECM\) Cooling Fan](#) (18.30.80)
- 303-14C : Electronic Engine Controls - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Electronic Engine Controls](#)
 - Removal and Installation
 - [Engine Oil Pressure \(EOP\) Sensor](#) (12.60.50)
 - [Oil Temperature Sensor](#) (12.60.65)
 - [Engine Control Module \(ECM\)](#) (18.30.03)
 - [Engine Coolant Temperature \(ECT\) Sensor](#) (18.30.10)
 - [Crankshaft Position \(CKP\) Sensor](#) (18.30.12)
 - [Crankshaft Position \(CKP\) Sensor Ring](#) (18.30.14)
 - [Camshaft Position \(CMP\) Sensor](#) (18.30.24)
 - [Manifold Absolute Pressure \(MAP\) Sensor](#) (18.30.56)
 - [Fuel Temperature Sensor](#) (19.22.08)
 - [Fuel Rail Pressure \(FRP\) Sensor](#) (19.22.29)
- Automatic Transmission/Transaxle
 - 307-01A : Automatic Transmission/Transaxle - 4.0L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Transmission Fluid Drain and Refill](#) (44.24.02)
 - [Transmission Fluid Level Check](#) (44.24.06)
 - Description and Operation
 - [Automatic Transmission](#)
 - Removal and Installation
 - [Transmission](#) (44.20.02)
 - In Vehicle Repair
 - [Selector Shaft Seal](#) (44.15.34)
 - [Transmission Control Module \(TCM\)](#) (44.15.46)
 - [Output Shaft Seal](#) (44.20.21)
 - [Fluid Pan, Gasket and Filter](#) (44.24.04)
 - [Main Control Valve Body](#) (44.40.01)
 - [Transmission Support Insulator](#) (12.45.08)
 - 307-01B : Automatic Transmission/Transaxle - 4.4L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Transmission Fluid Drain and Refill](#) (44.24.02)
 - [Transmission Fluid Level Check](#) (44.24.06)
 - Description and Operation
 - [Automatic Transmission](#)
 - Removal and Installation
 - [Transmission](#) (44.20.02)
 - In Vehicle Repair

- [Selector Shaft Seal](#) (44.15.34)
- [Transmission Control Module \(TCM\)](#) (44.15.46)
- [Output Shaft Seal](#) (44.20.21)
- [Fluid Pan, Gasket and Filter](#) (44.24.04)
- [Main Control Valve Body](#) (44.40.01)
- [Transmission Support Insulator](#) (12.45.08)
- 307-01C : Automatic Transmission/Transaxle - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Transmission Fluid Drain and Refill](#) (44.24.02)
 - [Transmission Fluid Level Check](#) (44.24.06)
 - Description and Operation
 - [Automatic Transmission](#)
 - Removal and Installation
 - [Transmission](#) (44.20.02)
 - In Vehicle Repair
 - [Selector Shaft Seal](#) (44.15.34)
 - [Transmission Control Module \(TCM\)](#) (44.15.46)
 - [Output Shaft Seal](#) (44.20.21)
 - [Fluid Pan, Gasket and Filter](#) (44.24.04)
 - [Main Control Valve Body](#) (44.40.01)
 - [Transmission Support Insulator](#) (12.45.08)
- 307-02A : Transmission/Transaxle Cooling - 4.0L**
 - Removal and Installation
 - [Transmission Fluid Cooler - 4.0L](#) (44.24.10)
- 307-02B : Transmission/Transaxle Cooling - 4.4L**
 - Removal and Installation
 - [Transmission Fluid Cooler](#) (44.24.10)
- 307-02C : Transmission/Transaxle Cooling - 2.7L Diesel**
 - Removal and Installation
 - [Transmission Fluid Cooler](#) (44.24.10)
- 307-05A : Automatic Transmission/Transaxle External Controls - 4.0L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Selector Lever Cable Adjustment](#) (44.30.04)
 - Removal and Installation
 - [Selector Lever](#) (44.15.04)
 - [Selector Lever Knob](#) (44.15.07)
 - [Selector Lever Cable](#) (44.15.08)
 - [Selector Lever Gate Finish Panel](#)
- 307-05B : Automatic Transmission/Transaxle External Controls - 4.4L**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Selector Lever Cable Adjustment](#) (44.30.04)
 - Removal and Installation
 - [Selector Lever](#) (44.15.04)
 - [Selector Lever Cable](#) (44.15.08)
 - [Selector Lever Knob](#) (44.15.07)
 - [Selector Lever Gate Finish Panel](#)
- 307-05C : Automatic Transmission/Transaxle External Controls - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Selector Lever Cable Adjustment](#) (44.30.04)
 - Removal and Installation
 - [Selector Lever](#) (44.15.04)
 - [Selector Lever Knob](#) (44.15.07)
 - [Selector Lever Cable](#) (44.15.08)
 - [Selector Lever Gate Finish Panel](#)
- Manual Transmission/Transaxle, Clutch and Transfer Case
- 308-00 : Manual Transmission/Transaxle and Clutch - General Information**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Clutch System Bleeding](#)
- 308-01 : Clutch - 2.7L Diesel**

- Specifications
 - [Specifications](#)
- Description and Operation
 - [Clutch](#)
- Removal and Installation
 - [Pilot Bearing](#) (12.21.45)
 - [Clutch Disc and Pressure Plate](#) (33.10.01)
- 308-02 : Clutch Controls - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Clutch Controls](#)
 - Removal and Installation
 - [Clutch Master Cylinder](#) (33.20.01)
 - [Clutch Pedal](#) (33.30.02)
 - [Clutch Slave Cylinder](#) (33.35.01)
- 308-03 : Manual Transmission/Transaxle - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Transmission Draining and Filling](#) (37.24.01)
 - Description and Operation
 - [Manual Transmission](#)
 - Removal
 - [Transmission](#) (37.20.02.99)
 - Installation
 - [Transmission](#) (37.20.02.99)
 - In Vehicle Repair
 - [Output Shaft Speed \(OSS\) Sensor](#) (37.16.30)
 - [Output Shaft Seal](#) (37.23.01)
 - [Countershaft Seal](#) (37.23.02)
 - [Input Shaft Seal](#) (37.23.06)
 - [Gearshift Control Shaft Seal](#) (37.23.10)
 - [Gear Position Sensor](#)
- 308-06 : Manual Transmission/Transaxle External Controls - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [External Controls](#)
 - Removal and Installation
 - [Gearshift Lever](#) (37.16.04)
- 308-07A : Four-Wheel Drive Systems**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Four-Wheel Drive Systems](#)
 - [Four-Wheel Drive Systems](#)
 - Removal and Installation
 - [Four-Wheel Drive \(4WD\) Control Module](#) (41.30.01)
 - [Transfer Case Shift Motor](#) (41.30.03)
 - [Transfer Case Clutch Solenoid](#) (41.30.08)
 - [High/Low Range Sensor](#)
- 308-07B : Transfer Case**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Transfer Case Draining and Filling](#) (41.20.04)
 - Description and Operation
 - [Transfer Case](#)
 - Removal
 - [Transfer Case - 4.4L](#) (41.20.25)
 - [Transfer Case - 2.7L Diesel](#) (41.20.25)
 - [Transfer Case - 4.0L](#) (41.20.25)
 - Installation
 - [Transfer Case - 4.0L](#) (41.20.25)
 - [Transfer Case - 4.4L](#) (41.20.25)
 - [Transfer Case - 2.7L Diesel](#) (41.20.25)
 - In Vehicle Repair

[Transfer Case Input Shaft Seal - 4.0L](#) (41.20.50)
[Transfer Case Input Shaft Seal - 4.4L](#) (41.20.50)
[Transfer Case Input Shaft Seal - 2.7L Diesel](#) (41.20.50)
[Transfer Case Front Output Shaft Seal](#) (41.20.51)
[Transfer Case Rear Output Shaft Seal](#) (41.20.54)

Exhaust System

309-00A : Exhaust System - 4.0L

Specifications

[Specifications](#)

Description and Operation

[Exhaust System](#)

Removal and Installation

[Catalytic Converter LH](#) (17.50.03)

[Catalytic Converter RH](#) (17.50.04)

[Exhaust System](#) (30.10.08)

[Muffler](#) (30.10.11)

[Tailpipe](#) (30.10.22)

309-00B : Exhaust System - 4.4L

Specifications

[Specifications](#)

Description and Operation

[Exhaust System](#)

Removal and Installation

[Catalytic Converter LH](#) (17.50.03)

[Catalytic Converter RH](#) (17.50.04)

[Exhaust System](#) (30.10.08)

[Muffler](#) (30.10.11)

[Tailpipe](#) (30.10.22)

309-00C : Exhaust System - 2.7L Diesel

Specifications

[Specifications](#)

Description and Operation

[Exhaust System](#)

Removal and Installation

[Catalytic Converter](#) (17.50.01)

[Exhaust System](#) (30.10.08)

[Muffler](#) (30.10.11)

[Tailpipe](#) (30.10.22)

Fuel System

310-00 : Fuel System - General Information

General Procedures

[Low-Pressure Fuel System Bleeding](#)

[Fuel Tank Draining](#) (19.55.02)

[Fuel System Pressure Release - 4.0L](#) (19.50.02)

[Fuel System Pressure Release - 4.4L](#) (19.50.02)

310-01A : Fuel Tank and Lines - 4.0L

Specifications

[Specifications](#)

Description and Operation

[Fuel Tank and Lines](#)

Removal and Installation

[Fuel Pump Module](#) (19.45.03)

[Fuel Tank Filler Pipe](#) (19.55.07)

[Fuel Tank](#) (19.55.01)

310-01B : Fuel Tank and Lines - 4.4L

Specifications

[Specifications](#)

Description and Operation

[Fuel Tank and Lines](#)

Removal and Installation

[Fuel Pump Module](#) (19.45.03)

[Fuel Tank Filler Pipe](#) (19.55.07)

[Fuel Tank](#) (19.55.01)

310-01C : Fuel Tank and Lines - 2.7L Diesel

Specifications

[Specifications](#)

Description and Operation

[Fuel Tank and Lines](#)

Removal and Installation
[Fuel Pump Module](#) (19.45.03)
[Fuel Tank](#) (19.55.01)
[Fuel Tank Filler Pipe](#) (19.55.07)
[Fuel Filter Element](#)

310-02A : Acceleration Control - 4.0L

Specifications
[Specifications](#)
Description and Operation
[Acceleration Control](#)
Removal and Installation
[Accelerator Pedal](#) (19.20.01)

310-02B : Acceleration Control - 4.4L

Specifications
[Specifications](#)
Description and Operation
[Acceleration Control](#)
Removal and Installation
[Accelerator Pedal](#) (19.20.01)

310-02C : Acceleration Control - 2.7L Diesel

Specifications
Description and Operation
[Acceleration Control](#)
Removal and Installation
[Accelerator Pedal](#) (19.20.01)

310-03A : Speed Control

Description and Operation
[Speed Control](#)

310-03B : Speed Control - 2.7L Diesel

Description and Operation
[Speed Control](#)

Electrical

Climate Control System

412-00 : Climate Control System - General Information

Specifications
[Specifications](#)
General Procedures
[Air Conditioning \(A/C\) System Recovery, Evacuation and Charging](#) (82.30.02)

412-01 : Air Distribution and Filtering

Description and Operation
[Air Distribution and Filtering](#)
Removal and Installation
[Driver Side Register Trim Panel](#) (76.46.12)
[Passenger Side Register Trim Panel](#) (76.46.13)
[Pollen Filter](#) (80.15.42)
[Plenum Chamber](#) (80.15.62)

412-02A : Heating and Ventilation

Description and Operation
[Heating and Ventilation](#)
Removal and Installation
[Blower Motor](#) (80.20.15)
[Heater Core - LHD](#) (80.20.29)
[Heater Core - RHD](#) (80.20.29)

412-02B : Auxiliary Heating

Specifications
[Specifications](#)
Description and Operation
[Auxiliary Heater](#)
Removal and Installation
[Fuel Fired Booster Heater](#) (80.40.01)

412-03A : Air Conditioning - 4.0L

Specifications
[Specifications](#)
Description and Operation
[Air Conditioning](#)
Removal and Installation
[Air Conditioning \(A/C\) Compressor](#) (82.10.20)
[Condenser Core](#) (82.15.07)

- [Receiver Drier](#) (82.17.03)
- [Air Conditioning \(A/C\) Pressure Transducer](#) (82.20.38)
- [Thermostatic Expansion Valve](#) (82.25.01)
- [Evaporator Core](#) (82.25.20)
- 412-03B : Air Conditioning - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Air Conditioning](#)
 - Removal and Installation
 - [Air Conditioning \(A/C\) Compressor](#) (82.10.20)
 - [Condenser Core](#) (82.15.07)
 - [Receiver Drier](#) (82.17.03)
 - [Air Conditioning \(A/C\) Pressure Transducer](#) (82.20.38)
 - [Thermostatic Expansion Valve](#) (82.25.01)
 - [Evaporator Core](#) (82.25.20)
- 412-03C : Air Conditioning - 2.7L Diesel**
 - Specifications
 - Description and Operation
 - [Air Conditioning](#)
 - Removal and Installation
 - [Air Conditioning \(A/C\) Compressor](#) (82.10.20)
 - [Condenser Core](#) (82.15.07)
 - [Receiver Drier](#) (82.17.03)
 - [Air Conditioning \(A/C\) Pressure Transducer](#) (82.20.38)
 - [Thermostatic Expansion Valve](#) (82.25.01)
 - [Evaporator Core](#) (82.25.20)
- 412-03D : Auxiliary Climate Control**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Auxiliary Climate Control](#)
 - Removal and Installation
 - [Thermostatic Expansion Valve](#) (82.26.01)
 - [Heater Core](#) (82.26.19)
 - [Evaporator Core](#) (82.26.20)
 - [Auxiliary Climate Control Assembly](#) (82.26.22)
 - [Blower Motor](#) (82.26.33)
 - [Auxiliary Temperature Blend Door Actuator](#) (82.26.34)
 - [Auxiliary Blend Door Actuator](#) (82.26.35)
 - [Auxiliary Blower Motor Control Module](#) (82.26.45)
- 412-04 : Control Components**
 - Specifications
 - Description and Operation
 - [Control Components](#)
 - Removal and Installation
 - [Climate Control Assembly](#) (80.10.02)
 - [Defrost Vent/Register Blend Door Actuator - LHD](#) (80.10.36)
 - [Defrost Vent/Register Blend Door Actuator - RHD](#) (80.10.36)
 - [Driver Side Temperature Blend Door Actuator](#) (80.10.37)
 - [Passenger Side Temperature Blend Door Actuator](#) (80.10.38)
 - [Instrument Panel Blend Door Actuator - LHD](#) (80.20.09)
 - [Instrument Panel Blend Door Actuator - RHD](#) (80.20.09)
 - [Sunload Sensor](#) (82.20.92)
 - [In-Vehicle Temperature Sensor](#) (82.20.93)
 - [Ambient Air Temperature Sensor](#) (80.40.31)
 - Instrumentation and Warning Systems
- 413-00 : Instrument Cluster and Panel Illumination**
 - Description and Operation
 - [Instrument Cluster and Panel Illumination](#)
- 413-01 : Instrument Cluster**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Instrument Cluster](#)
 - Removal and Installation
 - [Instrument Cluster](#) (80.20.01.99)
- 413-06 : Horn**

- Description and Operation
 - [Horn](#)
- Removal and Installation
- 413-07 : Clock**
 - Description and Operation
 - [Clock](#)
- 413-08 : Information and Message Center**
 - Description and Operation
 - [Information and Message Center](#)
- 413-09A : Warning Devices**
 - Specifications
 - [Specifications](#)
 - Removal and Installation
 - [Low Tire Pressure Module](#) (86.54.05)
- 413-09B : Engine Protection System**
 - Specifications
 - [Specifications](#)
- 413-13 : Parking Aid**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Parking Aid](#)
 - Removal and Installation
 - [Parking Aid Module](#) (86.54.10)
 - [Parking Aid Speaker](#) (86.54.19)
 - [Front Inner Parking Aid Sensor](#) (86.54.21)
 - [Front Outer Parking Aid Sensor](#) (86.54.22)
 - [Rear Inner Parking Aid Sensor](#) (86.54.23)
 - [Rear Outer Parking Aid Sensor](#) (86.54.24)
- Battery and Charging System
- 414-00 : Charging System - General Information**
 - Specifications
 - [Specifications](#)
- 414-01 : Battery, Mounting and Cables**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Battery and Cables](#)
 - Removal and Installation
 - [Battery Tray](#) (76.10.30)
 - [Auxiliary Battery Tray](#) (76.10.31)
 - [Battery](#) (86.15.01)
- 414-02A : Generator and Regulator - 4.0L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Generator](#)
 - Removal and Installation
 - [Generator](#) (86.10.02)
- 414-02B : Generator and Regulator - 4.4L**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Generator](#)
 - Removal and Installation
 - [Generator](#) (86.10.02)
- 414-02C : Generator and Regulator - 2.7L Diesel**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Generator](#)
 - Removal and Installation
 - [Generator](#) (86.10.02)
- Entertainment Systems
- 415-01 : Audio Unit**
 - Specifications
 - [Specifications](#)
 - Description and Operation

- [Audio System](#)
 - Removal and Installation
 - [Audio Unit](#) (86.50.81)
 - [Audio Amplifier](#) (86.50.36)
- 415-02 : Antenna**
 - Description and Operation
 - [Antenna](#)
 - Removal and Installation
- 415-03 : Speakers**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Speakers](#)
 - Removal and Installation
 - [Front Door Speaker](#) (86.50.10)
 - [Rear Door Speaker](#) (86.50.12)
 - [Instrument Panel Speaker](#) (86.50.11)
 - [Quarter Panel Speaker](#) (86.50.48)
 - [Tailgate Speaker](#) (86.50.47)
- 415-07 : Video System**
 - Description and Operation
 - [Video System](#)
 - Lighting
- 417-01 : Exterior Lighting**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Headlamp Adjustment](#) (86.40.17)
 - Description and Operation
 - [Exterior Lighting](#)
 - Removal and Installation
 - [Stoplamp Switch](#) (70.35.42)
 - [Headlamp Assembly](#) (86.40.49)
 - [Side Turn Signal Lamp](#) (86.40.53)
 - [Rear Lamp Assembly](#) (86.40.70)
 - [Front Fog Lamp](#) (86.40.96)
 - [High Mounted Stoplamp](#) (86.41.32)
 - [Adaptive Front Lighting Module](#) (86.54.06)
 - [Headlamp Switch](#) (86.65.09)
- 417-02 : Interior Lighting**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Interior Lighting](#)
- 417-04 : Daytime Running Lamps (DRL)**
 - Description and Operation
 - [Daytime Running Lamps \(DRL\)](#)
 - Electrical Distribution
- 418-00 : Module Communications Network**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Communications Network](#)
 - Removal and Installation
 - [Battery Junction Box \(B.JB\) - 4.0L](#) (86.70.55)
 - [Battery Junction Box \(B.JB\) - 4.4L](#) (86.70.55)
 - [Battery Junction Box \(B.JB\) - 2.7L Diesel](#) (86.70.55)
 - [Central Junction Box \(C.JB\)](#) (86.70.56)
- 418-01 : Module Configuration**
- 418-02 : Wiring Harnesses**
 - Specifications
 - [Specifications](#)
 - Removal and Installation
 - [Engine Wiring Harness - 4.0L](#) (86.70.17)
 - [Engine Wiring Harness - 4.4L](#) (86.70.17)
 - [Engine Wiring Harness - 2.7L Diesel](#) (86.70.17)
 - [Liftgate Wiring Harness](#) (86.70.84)
- Electronic Feature Group

- 419-01A : Anti-Theft - Active**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Anti-Theft - Active](#)
 - Removal and Installation
 - [Hood Switch](#) (86.77.20)
 - [Antenna](#) (86.77.31)
- 419-01B : Anti-Theft - Passive**
 - Description and Operation
 - [Anti-Theft - Passive](#)
- 419-05 : Telematics**
 - Description and Operation
- 419-07 : Navigation System**
 - Description and Operation
 - [Navigation System](#)
 - Removal and Installation
 - [Navigation System Display Module](#) (86.53.20)
 - [Navigation System Compact Disc \(CD\) Unit](#) (86.53.20)
 - [Navigation System Traffic Amplifier](#) (86.53.23)
 - [Navigation System Antenna - Vehicles With: Metal Roof Panel](#) (86.53.61)
 - [Navigation System Antenna - Vehicles With: Glass Roof Panel](#) (86.53.61)
- 419-08 : Cellular Phone**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Cellular Phone](#)
 - Removal and Installation
 - [Cellular Phone Antenna](#) (86.53.11)
- 419-10 : Multifunction Electronic Modules**
 - Description and Operation
- Body and Paint**
 - Body and Paint
- 501-02 : Front End Body Panels**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - Removal and Installation
 - [Fender](#) (76.10.24)
 - [Fender Splash Shield](#) (76.10.48)
 - [Engine Undershield](#) (76.10.50)
- 501-03 : Body Closures**
 - General Procedures
 - [Liftgate Alignment](#) (76.28.31)
 - Description and Operation
 - Removal and Installation
 - [Fuel Filler Door Assembly](#) (19.55.04)
 - [Fuel Filler Interlock Catch](#) (19.55.17)
 - [Liftgate](#) (76.28.29)
- 501-05 : Interior Trim and Ornamentation**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - Removal and Installation
 - [Engine Cover - 4.0L](#) (12.30.50)
 - [Engine Cover - 4.4L](#) (12.30.50)
 - [Engine Cover - 2.7L Diesel](#) (12.30.50)
 - [A-Pillar Trim Panel](#) (76.13.26)
 - [Cowl Side Trim Panel](#) (76.13.27)
 - [B-Pillar Upper Trim Panel](#) (76.13.28)
 - [B-Pillar Lower Trim Panel](#) (76.13.29)
 - [D-Pillar Trim Panel](#) (76.13.30)
 - [C-Pillar Lower Trim Panel](#) (76.13.34)
 - [C-Pillar Upper Trim Panel](#) (76.13.35)
 - [Front Door Trim Panel](#) (76.34.01)
 - [Rear Door Trim Panel](#) (76.34.04)
 - [Liftgate Trim Panel](#) (76.34.11)
 - [Tailgate Trim Panel](#) (76.49.23)

- [Scuff Plate Trim Panel](#) (76.49.54)
 - [Headliner](#) (76.64.15)
- 501-08 : Exterior Trim and Ornamentation**
 - Description and Operation
 - Removal and Installation
 - [A-Pillar Moulding LH](#)
 - [Fender Moulding](#) (76.43.54)
 - [Rear Quarter Panel Moulding](#) (76.43.55)
 - [Radiator Grille](#) (76.55.03)
 - [Rear Quarter Window Moulding](#)
- 501-09 : Rear View Mirrors**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Rear View Mirrors](#)
 - Removal and Installation
 - [Interior Mirror](#) (76.10.51)
 - [Exterior Mirror Glass](#) (76.11.08)
 - [Exterior Mirror](#) (76.11.10)
- 501-10 : Seating**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Seats](#)
 - Removal and Installation
 - [Front Seat Cushion](#) (78.10.12/99)
 - [Front Seat](#) (78.10.44/99)
 - [Third Row Seat](#) (78.10.39)
 - [Rear Seat - Vehicles With: 60/40 Split Seat](#) (78.10.70)
 - [Rear Seat - Vehicles With: 40/20/40 Split Seat](#) (78.10.70)
 - [Front Seat Cushion Cover](#) (78.30.01)
 - [Front Seat Cushion Heater Mat](#) (78.30.23)
 - [Third Row Seat Cushion Cover](#) (78.40.06)
 - [Third Row Seat Cushion](#) (78.40.52)
 - [Rear Seat Cushion Cover - Vehicles With: 60/40 Split Seat](#) (78.40.70)
 - [Rear Seat Cushion Cover - Vehicles With: 40/20/40 Split Seat](#) (78.40.70)
 - [Front Seat Track Motor](#) (78.70.25)
 - [Front Seat Height Adjustment Motor](#) (78.70.27)
 - [Front Seat Tilt Motor](#) (78.70.29)
 - [Front Seat Recliner Motor](#) (78.70.34)
 - [Front Seat Control Switch](#) (78.70.89)
 - [Front Seat Backrest Cover](#) (78.90.08)
 - [Third Row Seat Backrest Cover](#) (78.90.17)
 - [Front Seat Backrest Heater Mat](#) (78.90.36)
 - [Rear Seat Backrest Cover - Vehicles With: 60/40 Split Seat](#) (78.90.72)
 - [Rear Seat Backrest Cover - Vehicles With: 40/20/40 Split Seat](#) (78.90.72)
- 501-11 : Glass, Frames and Mechanisms**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Glass, Frames and Mechanisms](#)
 - Removal and Installation
 - [Front Door Window Glass](#) (76.31.01)
 - [Rear Door Window Glass](#) (76.31.02)
 - [Liftgate Window Glass](#) (76.31.22)
 - [Rear Door Fixed Window Glass](#) (76.31.31)
 - [Windshield Glass](#) (76.81.01)
 - [Glass Roof Panel](#) (76.81.05)
 - [Rear Quarter Window Glass](#) (76.81.20)
 - [Front Door Window Regulator and Motor](#) (86.25.03)
 - [Rear Door Window Regulator and Motor](#) (86.25.05)
 - [Front Door Window Control Switch](#)
 - [Rear Door Window Control Switch](#)
- 501-12 : Instrument Panel and Console**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Instrument Panel](#)

- [Floor Console](#)
- [Overhead Console](#)
- Removal and Installation
 - [Floor Console](#) (76.25.01)
 - [Instrument Panel Console](#) (76.25.03)
 - [Floor Console Upper Panel](#) (76.25.11)
 - [Instrument Panel Upper Section](#) (76.46.04)
 - [Instrument Panel - 4.4L](#) (76.46.23/99)
 - [Instrument Panel - 2.7L Diesel](#) (76.46.23/99)
 - [Instrument Panel - 4.0L](#) (76.46.23/99)
 - [Instrument Panel Driver Side Reinforcement](#) (76.46.31)
 - [Instrument Panel Passenger Side Reinforcement](#) (76.46.32)
 - [Instrument Panel Center Reinforcement](#) (76.46.34)
 - [Glove Compartment](#) (76.52.03)
 - [Instrument Panel Console Switch Assembly](#) (86.65.17)
- 501-14 : Handles, Locks, Latches and Entry Systems**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Tailgate Striker Adjustment](#) (76.28.03)
 - [Liftgate Striker Adjustment](#) (76.37.28)
 - Description and Operation
 - [Handles, Locks, Latches and Entry Systems](#)
 - Removal and Installation
 - [Ignition Lock Cylinder](#) (57.40.28)
 - [Hood Latch Release Handle](#) (76.16.30)
 - [Front Door Latch](#) (76.37.12)
 - [Rear Door Latch](#) (76.37.13)
 - [Liftgate Latch](#) (76.37.19)
 - [Door Lock Cylinder](#) (76.37.39)
 - [Tailgate Latch](#) (76.37.83)
 - [Exterior Front Door Handle](#) (76.58.07)
 - [Exterior Rear Door Handle](#) (76.58.07)
 - [Liftgate Latch Actuator](#) (86.26.27)
- 501-16 : Wipers and Washers**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Wipers and Washers](#)
 - Removal and Installation
 - [Windshield Washer Reservoir](#) (84.10.03)
 - [Windshield Washer Pump](#) (84.10.21)
 - [Rain Sensor](#) (84.12.11)
 - [Front Wiper Pivot Arm](#) (84.15.02)
 - [Windshield Wiper Motor](#) (84.15.12)
 - [Headlamp Washer Jet](#) (84.20.08)
 - [Headlamp Washer Pump](#) (84.20.21)
 - [Rear Wiper Pivot Arm](#) (84.35.01)
 - [Rear Window Wiper Motor](#) (84.35.12)
- 501-17 : Roof Opening Panel**
 - Specifications
 - [Specifications](#)
 - General Procedures
 - [Roof Opening Panel Alignment](#) (76.84.82)
 - Description and Operation
 - [Roof Opening Panel](#)
 - Removal and Installation
 - [Roof Opening Panel](#) (76.84.01)
 - [Roof Opening Panel Glass](#) (76.84.03)
 - [Roof Opening Panel Motor](#) (76.84.07)
 - [Roof Opening Panel Module](#) (76.84.46)
- 501-19 : Bumpers**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - Removal and Installation
 - [Front Bumper](#) (76.22.49)
 - [Front Bumper Cover](#) (76.22.72)

- [Rear Bumper Cover \(76.22.74\)](#)
- 501-20A : Safety Belt System**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Safety Belt System](#)
 - Removal and Installation
 - [Front Safety Belt Retractor \(76.73.13\)](#)
 - [Second Row Center Safety Belt Retractor - Vehicles With: 60/40 Split Seat \(76.73.20\)](#)
 - [Second Row Center Safety Belt Retractor - Vehicles With: 40/20/40 Split Seat \(76.73.20\)](#)
 - [Second Row Safety Belt Retractor \(76.73.23\)](#)
 - [Third Row Safety Belt Retractor \(76.73.28\)](#)
 - [Front Safety Belt Buckle \(76.73.30\)](#)
 - [Rear Safety Belt Buckle - Vehicles With: 40/20/40 Split Seat \(76.73.30\)](#)
 - [Rear Safety Belt Buckle LH - Vehicles With: 60/40 Split Seat \(76.73.60\)](#)
 - [Rear Safety Belt Buckle RH - Vehicles With: 60/40 Split Seat \(76.73.62\)](#)
 - [Rear Center Safety Belt Buckle - Vehicles With: 60/40 Split Seat \(76.73.64\)](#)
- 501-20B : Supplemental Restraint System**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Air Bag and Safety Belt Pretensioner Supplemental Restraint System \(SRS\)](#)
 - Removal and Installation
 - [Driver Air Bag Module \(76.74.01\)](#)
 - [Passenger Air Bag Module \(76.74.02\)](#)
 - [Rear Side Air Curtain Module \(76.74.04\)](#)
 - [Front Impact Severity Sensor \(76.74.08\)](#)
 - [Passenger Air Bag Deactivation \(PAD\) Switch \(76.74.19\)](#)
 - [Clockspring \(76.74.20\)](#)
 - [B-Pillar Side Impact Sensor \(76.74.23\)](#)
 - [C-Pillar Side Impact Sensor \(76.74.24\)](#)
 - [Front Door Side Impact Sensor \(76.74.25\)](#)
 - [Side Air Bag Module \(76.74.30\)](#)
 - [Side Air Curtain Module \(76.74.40\)](#)
 - [Restraints Control Module \(RCM\) \(76.74.68\)](#)
 - [Occupant Classification Sensor \(76.74.76\)](#)
- 501-25A : Body Repairs - General Information**
 - Description and Operation
 - [Body Repairs](#)
- 501-25C : Body Repairs - Corrosion Protection**
 - Description and Operation
 - [Corrosion Protection](#)
- 501-25D : Body Repairs - Water Leaks**
 - Description and Operation
 - [Water Leaks](#)
- 501-26 : Body Repairs - Vehicle Specific Information and Tolerance Checks**
 - Description and Operation
 - [Body and Frame](#)
- 501-27 : Front End Sheet Metal Repairs**
 - Specifications
 - [Specifications](#)
 - Description and Operation
 - [Front End Sheet Metal](#)
 - Removal and Installation
 - [Hood Latch Panel \(76.16.22\)](#)
 - [Front Crossmember \(77.20.25\)](#)
 - [Front Side Member \(77.30.22/23\)](#)
 - [Front Side Member Section \(77.30.20/21\)](#)
 - [Fender Apron Panel Reinforcement](#)
 - [Fender Apron Panel](#)
 - [Fender Apron Panel Section](#)
 - [Front Wheelhouse](#)
 - [Front Wheelhouse Reinforcement](#)
 - [Front Wheelhouse Section](#)
 - [Fender Apron Panel Closing Panel](#)
 - [Fender Apron Panel Reinforcement Front Section](#)
 - [Fender Apron Panel Reinforcement Rear Section](#)
- 501-28 : Roof Sheet Metal Repairs**

Specifications

[Specifications](#)

Description and Operation

[Roof](#)

Removal and Installation

[Roof Panel](#)

[Roof Front Frame](#)

501-29 : Side Panel Sheet Metal Repairs

Specifications

[Specifications](#)

Description and Operation

[Side Panel Sheet Metal](#)

Removal and Installation

[Rocker Panel](#) (77.40.60)

[A-Pillar Outer Panel](#)

[Side Panel](#) (77.40.01)

[B-Pillar Outer Panel](#)

[A-Pillar Reinforcement](#)

[B-Pillar Reinforcement](#)

[Side Panel Front Section](#)

501-30 : Rear End Sheet Metal Repairs

Specifications

[Specifications](#)

Description and Operation

[Rear End Sheet Metal](#)

Removal and Installation

[Quarter Panel](#) (77.40.09)

[Inner Quarter Panel](#) (77.40.37)

[Water Drain Panel](#)

[Rear Wheelhouse Outer](#) (77.40.36)

[Rear Lamp Mounting Panel](#) (77.80.25)

[Back Panel](#) (77.80.20)

[Rear Floor Panel Section](#) (77.70.02)

[Rear Crossmember](#)

[Rear Side Member](#)

[Quarter/Side Panel Rear Section L H](#)

[Rear Side Member Section](#) (77.70.07)

[D-Pillar Inner Lower Panel](#)

[D-Pillar Closing Panel](#)

Frame and Mounting

502-02 : Full Frame and Body Mounting

Specifications

[Specifications](#)

General Procedures

[Welding Precautions](#)

Description and Operation

[Frame and Body Mounting](#)

Removal and Installation

[Transmission Support Crossmember](#)

[Body](#)

[Rear Crossmember](#)