

Front Door Speaker (86.50.10)

Removal

1. Remove the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)
2. Remove the speaker.
 - ▶ Disconnect the electrical connector.
 - ▶ Remove the 4 screws.



Installation

1. Install the speaker
 - ▶ Align the door wiring harness clip.
 - ▶ Tighten the screws.
 - ▶ Connect the electrical connector.
2. Install the front door trim panel. For additional information, refer to [Front Door Trim Panel \(76.34.01\)](#) (Section 501-05)