

Published : Jun 14, 2004

Quarter Panel Speaker (86.50.48)

Removal

NOTE :

The procedure to remove the quarter panel speaker is shown in the D-pillar trim panel procedure.

- 1 . Remove the D-pillar trim panel. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)

Installation

- 1 . Install the D-pillar trim panel. For additional information, refer to [D-Pillar Trim Panel \(76.13.30\)](#) (Section 501-05)