


Driver Side Temperature Blend Door Actuator (80.10.37)

Removal

1. Remove the instrument panel driver side reinforcement. For additional information, refer to [Instrument Panel Driver Side Reinforcement \(76.46.31\)](#) (Section 501-12)

2. Remove the driver side footwell duct.


▶ Remove the 2 Torx screws.

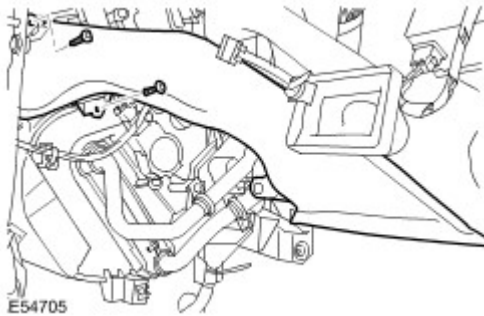

3. Remove the temperature blend door actuator.

▶ Disconnect the electrical connector.

▶ Remove the 2 screws.

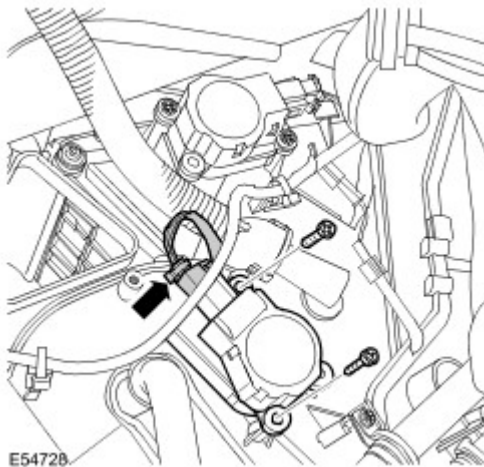

Installation

1. Install the temperature blend door actuator.

▶ Tighten the screws.

▶ Connect the electrical connector.

2. Install the driver side footwell duct.

▶ Tighten the screws.

- 3 . Install the instrument panel driver side reinforcement. For additional information, refer to [Instrument Panel Driver Side Reinforcement \(76.46.31\)](#) (Section 501-12)