

## Parking Aid Module (86.54.10)

### Removal

1. Remove the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)
2. Remove the parking aid module.
  - ▶ Disconnect the 3 electrical connectors.
  - ▶ Remove the 2 nuts.



### Installation

1. Install the parking aid module.
  - ▶ Tighten the nuts to 5 Nm (4 lb.ft).
  - ▶ Connect the electrical connectors.
2. Install the C-pillar lower trim panel. For additional information, refer to [C-Pillar Lower Trim Panel \(76.13.34\)](#) (Section 501-05)