


Rear Inner Parking Aid Sensor (86.54.23)

Removal

1. Remove the rear bumper cover. For additional information, refer to (Section 501-19)
2. Remove the parking aid sensor.


▶ Release the 2 clips.

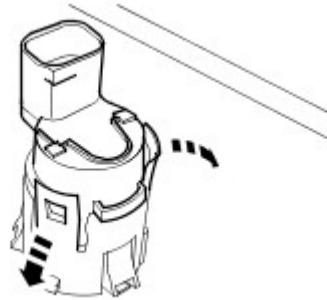

E45116

3. Remove the parking aid sensor trim panel.

▶ Release the 3 clips.

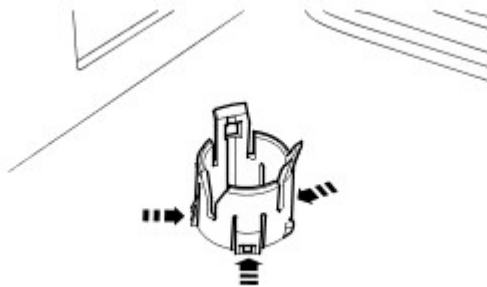

E45117

Installation

1. Install the parking aid sensor trim panel.
2. Install the parking aid sensor.
3. Install the rear bumper cover. For additional information, refer to (Section 501-19)