First remove the battery from the car.

Find the earth post behind the Engine Junction Box that the battery cable connects to and remove the domed nut (arrowed)

Run your cable underneath the bundle of wires coming from the Engine Junction Box , place it on the earth stud and retighten the nut.









