# **PAIRING HELP**

VEHICLE: EVOQUE - VIN: Latest Tested Version



HTC Desire S





## **Main Features**

#### Connection

- ✓ Handset can be paired and connected using the vehicle system.
- ✓ Handset can be paired and connected using the handset
- ✓ Handset will connect automatically when vehicle system is switched on
- ✓ Handset can be removed from the vehicle system device list
- ✓ Handset will disconnect and is ready for subsequent calls when vehicle system is switched off
- ✓ Active call is transferred to handset when vehicle system is shut down
- ✓ Handset can be connected via vehicle system
- ✓ Handset will reconnect and active call is transferred to the vehicle system when system is switched on

Phonebook download request must be accepted upon connection with the vehicle system.

## Phonebook & Call Lists

- ✓ Phonebook is automatically downloaded to the vehicle system.
- SIM contacts are downloaded to the vehicle system
- ✓ Handset contacts are downloaded to the vehicle system
- ✓ Last dialled calls are synchronized when the handset is connected
- ✓ Last received calls are synchronized when the handset is connected
- ✓ Last missed calls are synchronized when the handset is connected

Only contacts stored in the handset are displayed in the vehicle system (no SIM contacts).

# Outgoing Calls

- ✓ Dial a number using the vehicle system
- ✓ Dial a number from the vehicle system phonebook

## **Incoming Calls**

- ✓ Accept a call from the vehicle system
- ✓ Reject a call from the vehicle system
- ✓ Caller ID is displayed when receiving an incoming call

During an incoming call the ringtone can be heard over the loudspeakers but the handset rings as well. Handset ringtones (portable in-band ringtones) can not be selected from the vehicle system.

## n Call

- ✓ Mute/Unmute the microphone from the vehicle system
- ✓ Transfer an active call from handsfree to handset using vehicle system
- ✓ Transfer an active call from handset to handsfree using vehicle system
- ✓ Adjust volume using the vehicle system

## Music

- ✓ Audio device will pair and connect with the vehicle system
- ✓ Audio device will connect automatically when vehicle system is switched on
- ✓ Audio device will disconnect and is ready for subsequent music playing when vehicle system is switched off
- ✓ Audio device will start playback when vehicle is switched on
- ✓ Music playback is paused during an incoming call
- ✓ Music can be played and paused using the vehicle system
- ✓ Music playback is resumed after an active call is ended
- ✓ Music tracks can be skipped forward and back using the vehicle system.

## **Additional Features**

#### Connection

- ✓ Handset name is discovered by vehicle system during pairing.
- ✓ Vehicle system screen shows error message if a wrong passkey is entered
- ✓ Message is shown in the screen if session for pairing expires.
- ✓ Handset signal strength is displayed on vehicle systems screen when handset is connected.
- ✓ Vehicle screen shows no handset is connected when Bluetooth is turned off in the handset
- ✓ Vehicle screen shows no handset is connected when handset is taken out of the Bluetooth range.
- ✓ Handset battery meter is displayed on vehicle systems screen when handset is connected.
- ✓ Vehicle system name is shown in the handset as Jaguar XJ

Phonebook download request must be accepted upon connection with the vehicle system.

#### Phonebook & Call Lists

- ✓ Multiple numbers stored for a single contact are downloaded to the vehicle phonebook.
- ✓ Last ten dialled call list is updated when a call is made
- ✓ Last ten received call list is updated when a call is received
- ✓ Last ten missed call list is updated when a call is missed

Only contacts stored in the handset are displayed in the vehicle system (no SIM contacts).

# **Outgoing Calls**

- ✓ Dial a number from the handset when connected to vehicle system
- ✓ When a call fails the number remains on the vehicle system screen for redial
- ✓ Own number is sent or hidden according to phone settings
- ✓ Dial a number from vehicle system call list

#### Incoming Calls

- ✓ Incoming call is announced by the vehicle system
- ✓ Accept a call using the handset when connected to the vehicle system
- ✗ Handset ringtone is suppressed when receiving and incoming call
- X Ring tone selected in handset can be heard when receiving incoming call

During an incoming call the ringtone can be heard over the loudspeakers but the handset rings as well. Handset ringtones (portable in-band ringtones) can not be selected from the vehicle system.

## In Cal

- ✓ Send DTMF tones via vehicle system
- ✓ Handset can be connected using the vehicle system during a call
- ✓ Transfer an active call from handsfree to handset using handset
- ✓ Transfer an active call from handset to handsfree using handset
- ✓ Mute and unmute a call using handset
- ✓ Active call is transferred to handset when out of Bluetooth range

# **Quick Start Guide**

# Pairing Handset instructions are next to and vehicle instructions are next to and vehicle instructions are next to and vehicle instructions are next to an and vehicle instructions are next to an analysis and vehicle instructions are next to an analysis are next to analysis

## Connect



Press "Home"

Press the menu key

Select "Settings"

Select "Wireless & networks"

Accept request to pair with Jaguar

on the vehicle system screen.

NOTE: During pairing please use the PIN code which is displayed

Select "Bluetooth settings".

Press & hold Jaguar

Select "Connect"



Select "Phone" from the home screen

Select "Change phone"

Select "Connect" next to your phones name

# Disconnect



Press "Home"

Press the menu key

Select "Settings"

Select "Wireless & networks"

Select "Bluetooth settings".

Press & hold Jaguar

Select "Disconnect"



Select "Phone" from the home screen

Select "Settings"

Select "Disconnect"

## **Removing Pairing**



Press "Home"

Press the menu key

Select "Settings"

Select "Wireless & networks"

Select "Bluetooth settings".

Press & hold Jaguar

Select "Unpair"



Note: Handset has to be disconnect from phone and audio menus before pairing can be deleted from the vehicle system.

Select "Phone" from the home screen

Select "Change phone"

Select "Delete" for your phone's name

## **Downloading Phonebook**



While the handset is paired and connected:

Select "Phone" from the home screen

Select "Settings"

Select "Phone Options" from the settings view

Select "Phonebook" from the phone options view

Select Automatic download "On".

Follow instructions to disconnect and reconnect your phone. Upon reconnection the phonebook will be downloaded.



Note: Phonebook download is available only with compatible handsets.

## **Bluetooth Activity Indicator**



When Bluetooth is OFF the Bluetooth symbol is not present

When Bluetooth is ON the Bluetooth symbol is present

When connected to the Jaguar system the icon is present between brackets.



When phone is connected the Digital Dial screen is displayed

When the phone is not connected "Connected phone: none" is displayed on the phone screen view.

# **Phone Software**

## Software Version



Press the menu key

Select "Settings"

Select "About Phone"