




Door Lock Cylinder (76.37.39)

Removal

1. Remove the front door lock cylinder cover.
▶ Use the ignition key.

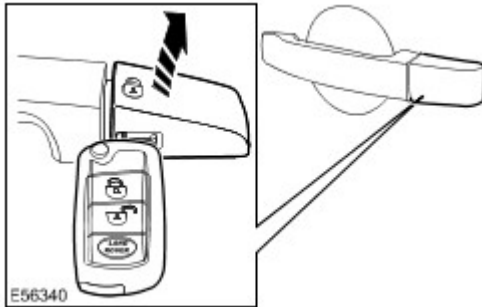

2. **NOTE :**
The Torx screw remains in the door lock housing.
Remove the front door lock cylinder.
▶ Open the door.
▶ Remove the access plug.
▶ Loosen the Torx screw to release the lock.



Installation

1. To install, reverse the removal procedure.