




## Spark Plugs (18.20.02)

### Removal

1. Disconnect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)
2. Remove the ignition coil-on-plugs. For additional information, refer to [Ignition Coil-On-Plug \(18.20.44\)](#) (Section 303-07)
3. Remove the remaining ignition coil-on-plugs.
4. Clean the area surrounding the spark plugs.
5. Remove the spark plugs.

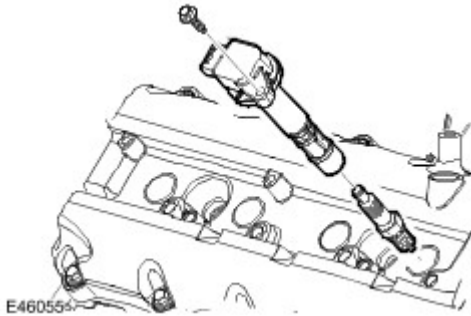

### Installation

1. Install the spark plugs.
  - ▶ Tighten the spark plugs to 25 Nm (18 lb.ft).
2. Install the ignition coil-on-plug. For additional information, refer to [Ignition Coil-On-Plug \(18.20.44\)](#) (Section 303-07)
3. Install the remaining coil-on-plugs.
4. Connect the battery ground cable. For additional information, refer to [Specifications](#) (Section 414-00)