


Quick start

STEERING COLUMN ADJUSTMENT

Manual adjustment

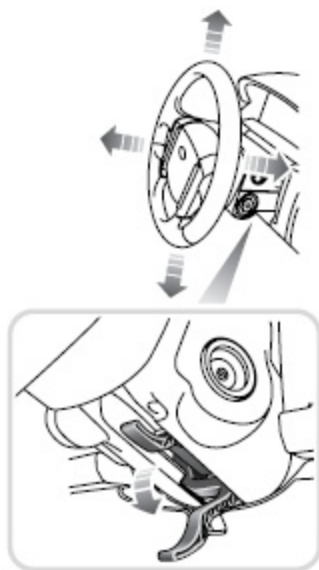

EB3435

1. Move the lever located under the steering wheel fully downward.
2. Adjust the height and reach of the steering wheel to the desired position.
3. Move the lever fully up to lock the position of the wheel.

Electric adjustment



EB1595

Turn the control on the left-hand side of the column clockwise and then move to adjust the height and reach.

Driver seat movement with starter switch off

If the control is set to AUTO, the position of the steering column and driver's seat will automatically adjust to provide greater clearance for exit and entry when the starter key is removed.

The position of the steering column and seat will be returned to their previous position next time the key is inserted into the starter switch.

Automatic seat movement
To prevent automatic movement of the driver's seat when the starter switch is turned on or off, turn the control to its clockwise position.