

Roof Opening Panel Alignment (76.84.82)


1 . With the roof opening panel closed, check the alignment of the glass to the roof panel. The glass should be central in its aperture. Profile of sunroof to body:

- Front edge, set flush or up to 1.0 mm (0.040') low.

Rear edge, set flush or up to 1.0 mm (0.040') high.

2 . Open the roof opening panel blind.

3 . Loosen the 6 roof opening panel Torx bolts.

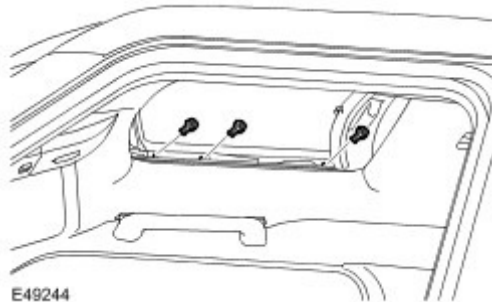

4 . Align the roof opening panel.

- Tighten the Torx screws to 6 Nm (4 lb.ft).

5 . Close the roof opening panel blind.