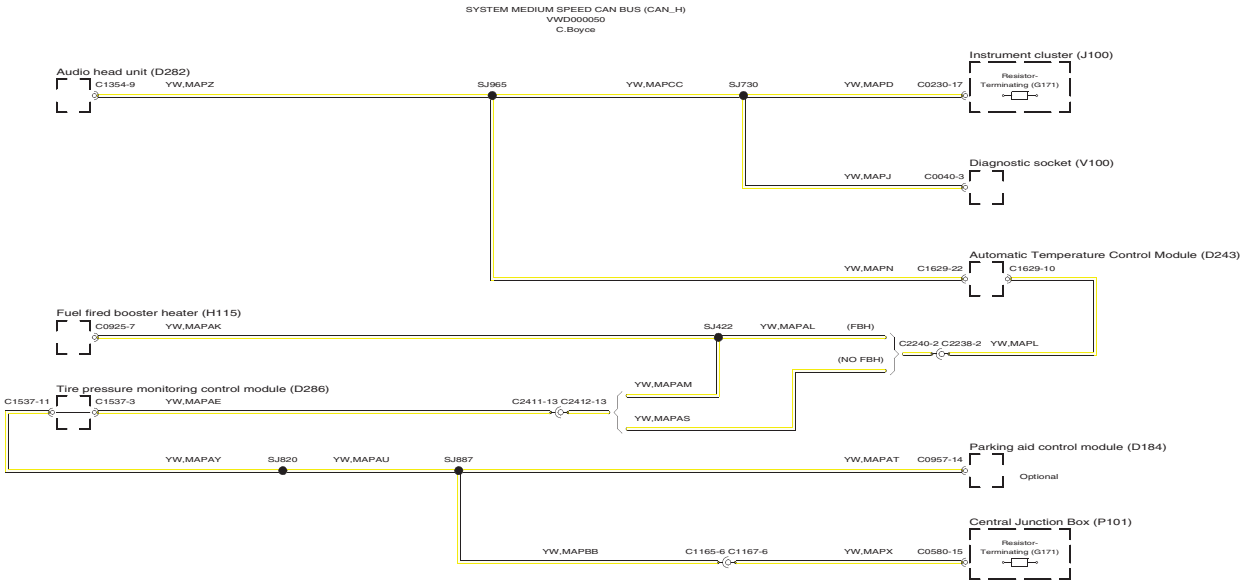
SYSTEM MEDIUM SPEED CAN BUS (CAN_H)
VWD000050
C.Boyce
Audio head unit (D282)
C1354-9
YW,MAPZ
SJ965
YW,MAPCC
SJ730
YW,MAPD
C0230-17
Instrument cluster (J100)
Resistor-
Terminating (G171)
YW,MAPJ
C0040-3
Diagnostic socket (V100)
YW,MAPN
C1629-22
C1629-10
Automatic Temperature Control Module (D243)
Fuel fired booster heater (H115)
C0925-7
YW,MAPAK
SJ422
YW,MAPAL
(FBH)
C2240-2 C2238-2
YW,MAPL
(NO FBH)
YW,MAPAM
Tire pressure monitoring control module (D286)
C1537-11
C1537-3
YW,MAPAE
C2411-13 C2412-13
YW,MAPAS
YW,MAPAY
SJ820
YW,MAPAU
SJ887
YW,MAPAT
C0957-14
Parking aid control module (D184)
Optional
Central Junction Box (P101)
YW,MAPBB
C1165-6 C1167-6
YW,MAPX
C0580-15
Resistor-
Terminating (G171)

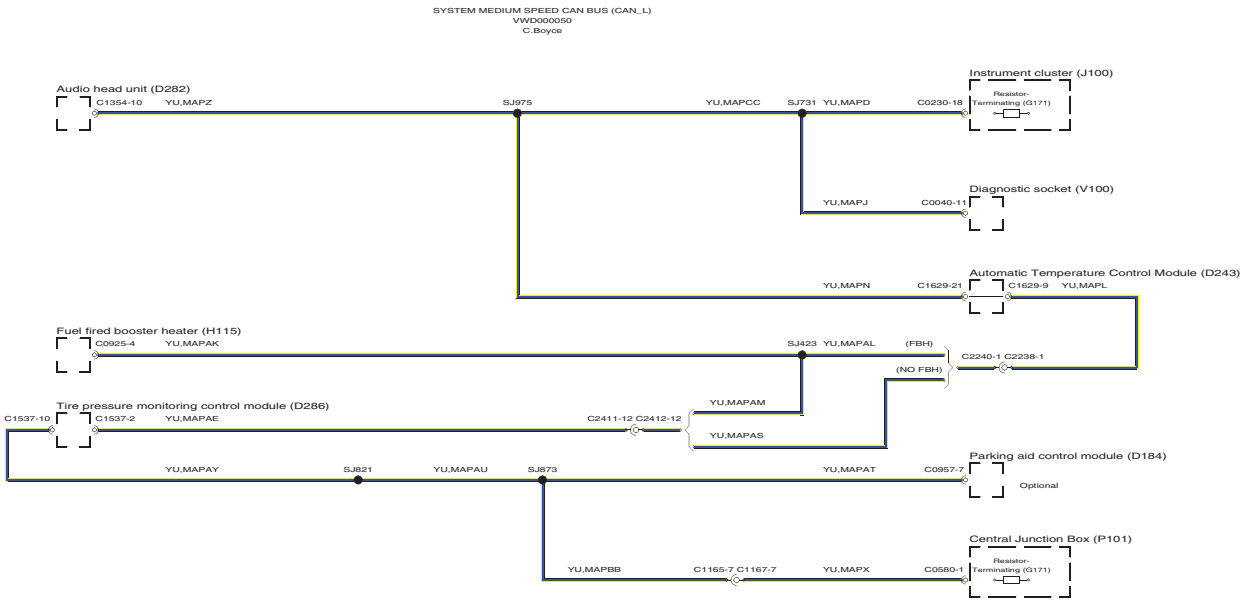
SYSTEM MEDIUM SPEED CAN BUS (CAN_L)
VWD000050
C.Boyce
Audio head unit (D282)
C1354-10
YU,MAPZ
SJ975
YU,MAPCC
SJ731
YU,MAPD
C0230-18
Instrument cluster (J100)
Resistor-Terminating (G171)
YU,MAPJ
C0040-11
Diagnostic socket (V100)
YU,MAPN
C1629-21
C1629-9
YU,MAPL
Automatic Temperature Control Module (D243)
Fuel fired booster heater (H115)
C0925-4
YU,MAPAK
SJ423
YU,MAPAL
(FBH)
(NO FBH)
C2240-1 C2238-1
YU,MAPAM
YU,MAPAS
Tire pressure monitoring control module (D286)
C1537-10
C1537-2
YU,MAPAE
C2411-12 C2412-12
YU,MAPAY
SJ821
YU,MAPAU
SJ873
YU,MAPAT
C0957-7
Parking aid control module (D184)
Optional
YU,MAPBB
C1165-7 C1167-7
YU,MAPX
C0580-1
Central Junction Box (P101)
Resistor-Terminating (G171)

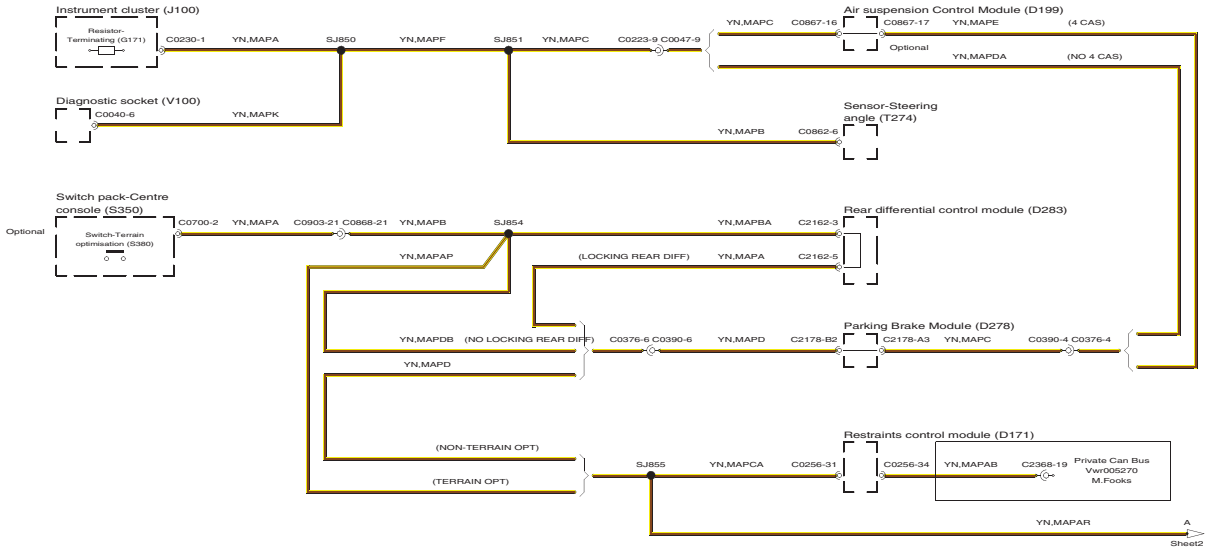
Instrument cluster (J100)
Resistor-Terminating (G171)
C0230-1
YN,MAPA
SJ850
YN,MAPF
SJ851
YN,MAPC
C0223-9 C0047-9
YN,MAPC
C0867-16
Air suspension Control Module (D199)
C0867-17
YN,MAPE
(4 CAS)
Optional
YN,MAPDA
(NO 4 CAS)
Diagnostic socket (V100)
C0040-6
YN,MAPK
Sensor-Steering angle (T274)
YN,MAPB
C0862-6
Switch pack-Centre console (S350)
Optional
Switch-Terrain optimisation (S380)
C0700-2
YN,MAPA
C0903-21 C0868-21
YN,MAPB
SJ854
YN,MAPBA
C2162-3
Rear differential control module (D283)
YN,MAPAP
(LOCKING REAR DIFF)
YN,MAPA
C2162-5
YN,MAPDB
(NO LOCKING REAR DIFF)
C0376-6 C0390-6
YN,MAPD
C2178-B2
Parking Brake Module (D278)
C2178-A3
YN,MAPC
C0390-4 C0376-4
YN,MAPD
Restraints control module (D171)
(NON-TERRAIN OPT)
(TERRAIN OPT)
SJ855
YN,MAPCA
C0256-31
C0256-34
YN,MAPAB
C2368-19
Private Can Bus
Vwr005270
M.Fooks
YN,MAPAR
A
Sheet2
CAN_H

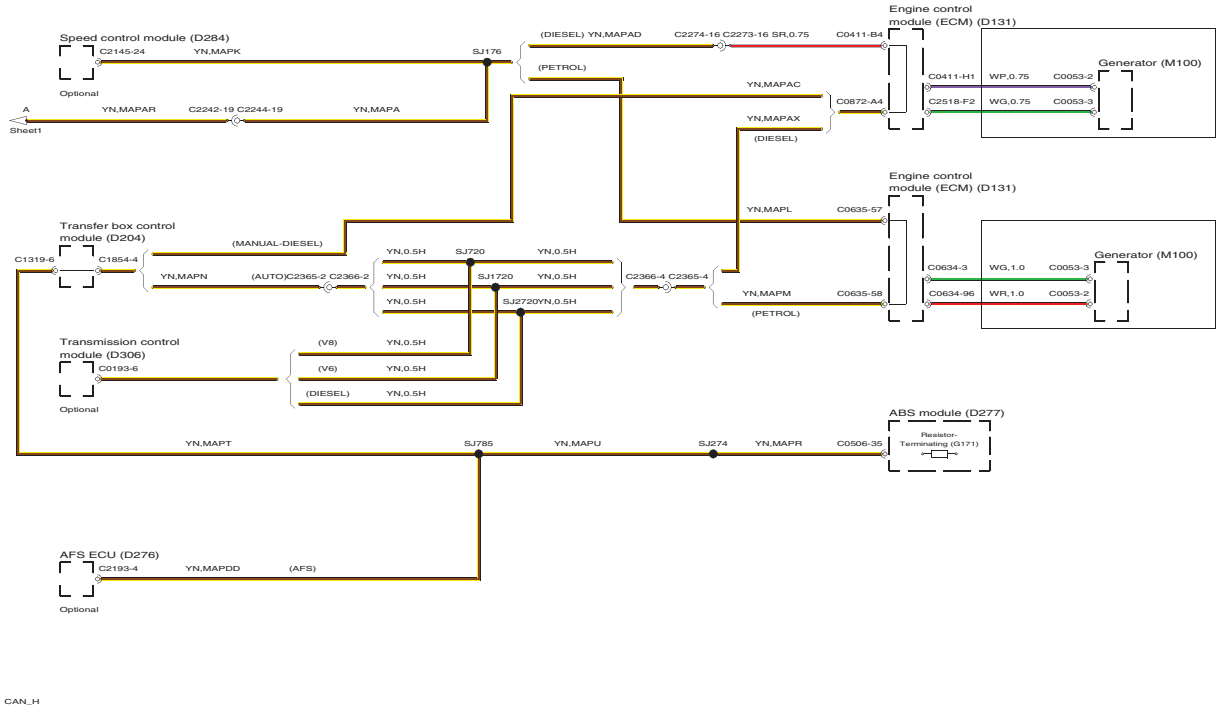
Speed control module (D284)
C2145-24
YN,MAPK
Optional
A
Sheet1
YN,MAPAR
C2242-19 C2244-19
YN,MAPA
SJ176
(DIESEL) YN,MAPAD
C2274-16 C2273-16 SR,0.75
C0411-B4
(PETROL)
YN,MAPAC
C0872-A4
YN,MAPAX
(DIESEL)
Engine control module (ECM) (D131)
C0411-H1
WP,0.75
C0053-2
C2518-F2
WG,0.75
C0053-3
Generator (M100)
Transfer box control module (D204)
C1319-6
C1854-4
(MANUAL-DIESEL)
YN,MAPN
(AUTO)C2365-2 C2366-2
YN,0.5H
SJ720
YN,0.5H
SJ1720
YN,0.5H
SJ2720YN,0.5H
C2366-4 C2365-4
YN,MAPL
C0635-57
YN,MAPM
C0635-58
(PETROL)
Engine control module (ECM) (D131)
C0634-3
WG,1.0
C0053-3
C0634-96
WR,1.0
C0053-2
Generator (M100)
Transmission control module (D306)
C0193-6
Optional
(V8)
YN,0.5H
(V6)
YN,0.5H
(DIESEL)
YN,0.5H
ABS module (D277)
Resistor, Terminating (G171)
YN,MAPT
SJ785
YN,MAPU
SJ274
YN,MAPR
C0506-35
AFS ECU (D276)
C2193-4
YN,MAPDD
(AFS)
Optional
CAN_H

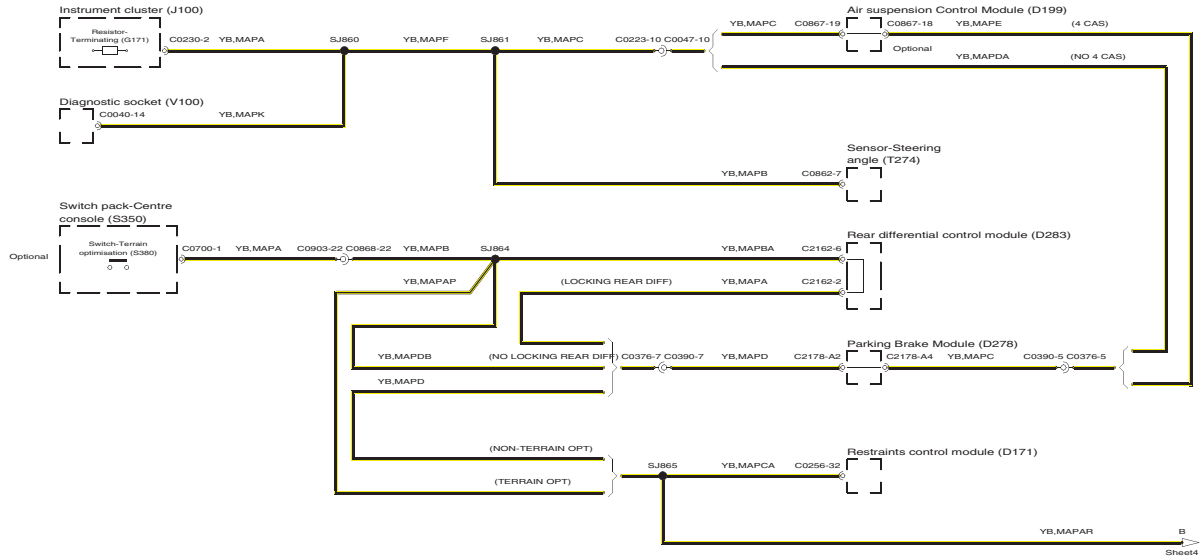
Instrument cluster (J100)
Resistor-Terminating (G171)
C0230-2
YB,MAPA
SJ860
YB,MAPF
SJ861
YB,MAPC
C0223-10 C0047-10
YB,MAPC
C0867-19
Air suspension Control Module (D199)
C0867-18
YB,MAPE
(4 CAS)
Optional
YB,MAPDA
(NO 4 CAS)
Diagnostic socket (V100)
C0040-14
YB,MAPK
Sensor-Steering angle (T274)
YB,MAPB
C0862-7
Switch pack-Centre console (S350)
Optional
Switch-Terrain optimisation (S380)
C0700-1
YB,MAPA
C0903-22 C0868-22
YB,MAPB
SJ864
YB,MAPBA
C2162-6
Rear differential control module (D283)
YB,MAPAP
(LOCKING REAR DIFF)
YB,MAPA
C2162-2
YB,MAPDB
(NO LOCKING REAR DIFF)
C0376-7 C0390-7
YB,MAPD
C2178-A2
Parking Brake Module (D278)
C2178-A4
YB,MAPC
C0390-5 C0376-5
YB,MAPD
(NON-TERRAIN OPT)
(TERRAIN OPT)
SJ865
YB,MAPCA
C0256-32
Restraints control module (D171)
YB,MAPAR
B
Sheet4

CAN_L

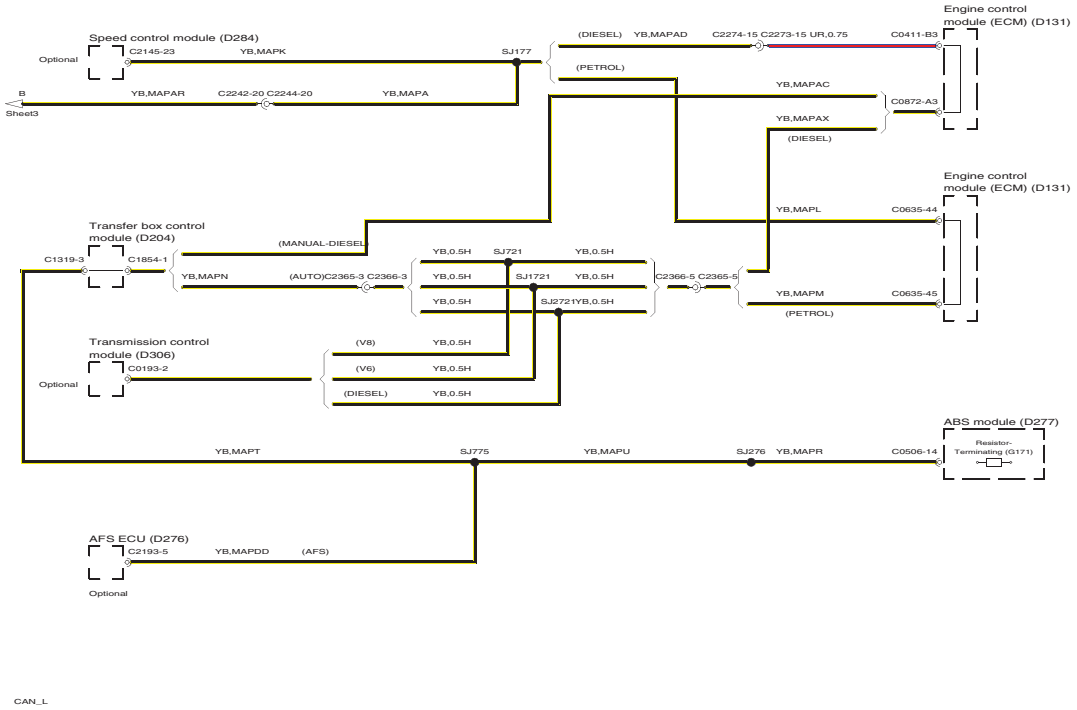
Engine control module (ECM) (D131)
Speed control module (D284)
Optional
C2145-23
YB,MAPK
SJ177
(DIESEL)
YB,MAPAD
C2274-15 C2273-15 UR,0.75
C0411-B3
(PETROL)
B
Sheet3
YB,MAPAR
C2242-20 C2244-20
YB,MAPA
YB,MAPAC
C0872-A3
YB,MAPAX
(DIESEL)
Engine control module (ECM) (D131)
YB,MAPL
C0635-44
Transfer box control module (D204)
(MANUAL-DIESEL)
C1319-3
C1854-1
YB,0.5H
SJ721
YB,0.5H
YB,MAPN
(AUTO)C2365-3 C2366-3
YB,0.5H
SJ1721
YB,0.5H
C2366-5 C2365-5
YB,0.5H
SJ2721YB,0.5H
YB,MAPM
C0635-45
(PETROL)
Transmission control module (D306)
C0193-2
Optional
(V8)
YB,0.5H
(V6)
YB,0.5H
(DIESEL)
YB,0.5H
ABS module (D277)
Resistor-Terminating (G171)
YB,MAPT
SJ775
YB,MAPU
SJ276
YB,MAPR
C0506-14
AFS ECU (D276)
C2193-5
YB,MAPDD
(AFS)
Optional
CAN_L

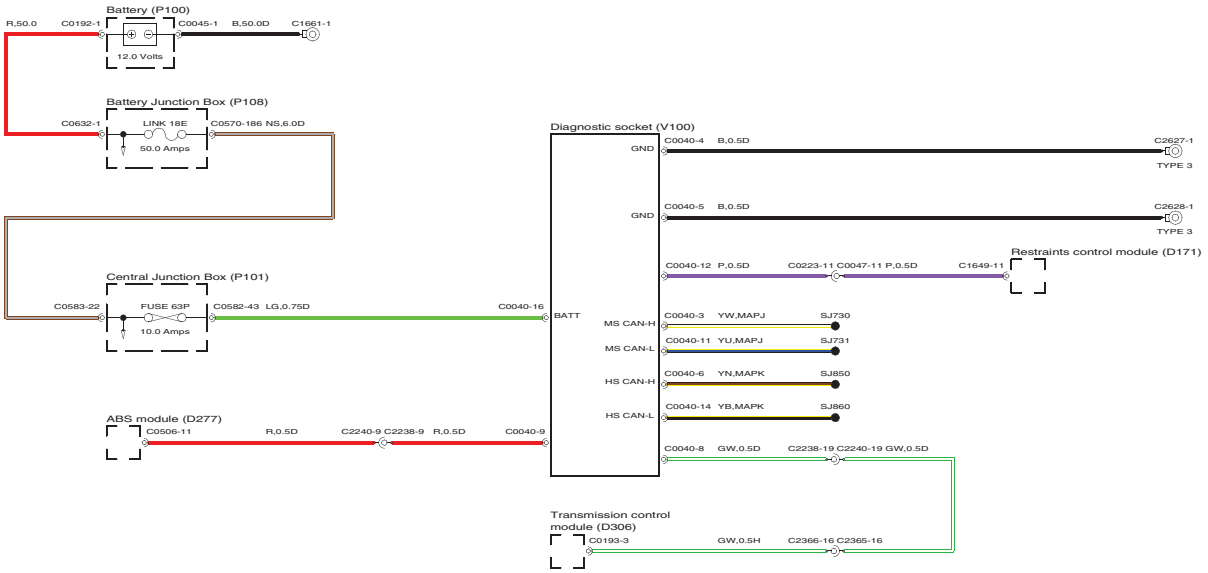
Battery (P100)
R,50.0
C0192-1
C0045-1
B,50.0D
C1661-1
12.0 Volts
Battery Junction Box (P108)
C0632-1
LINK 18E
C0570-186 NS,6.0D
50.0 Amps
Central Junction Box (P101)
C0583-22
FUSE 63P
C0582-43 LG,0.75D
C0040-16
10.0 Amps
ABS module (D277)
C0506-11
R,0.5D
C2240-9 C2238-9
R,0.5D
C0040-9
Diagnostic socket (V100)
GND
C0040-4 B,0.5D
C2627-1
TYPE 3
GND
C0040-5 B,0.5D
C2628-1
TYPE 3
Restraints control module (D171)
C0040-12 P,0.5D
C0223-11 C0047-11 P,0.5D
C1649-11
BATT
MS CAN-H
C0040-3 YW,MAPJ
SJ730
MS CAN-L
C0040-11 YU,MAPJ
SJ731
HS CAN-H
C0040-6 YN,MAPK
SJ850
HS CAN-L
C0040-14 YB,MAPK
SJ860
C0040-8 GW,0.5D
C2238-19 C2240-19 GW,0.5D
Transmission control module (D306)
C0193-3
GW,0.5H
C2366-16 C2365-16